

# BNP<sup>®</sup> 55

## Suction Blast Cabinet

### O. M. 23350

**DATE OF ISSUE:** 08/01  
**REVISION:** G, 02/19

#### **NOTICE TO PURCHASERS AND USERS OF OUR PRODUCTS AND THIS INFORMATIONAL MATERIAL**

Clemco proudly provides products for the abrasive blast industry and is confident that industry professionals will use their knowledge and expertise for the safe and efficient use of these products.

The products described in this material and the information relating to these products are intended for knowledgeable, experienced users. It is the responsibility of the employer to ensure that proper training of operators has been performed and a safe work environment is provided.

No representation is intended or made as to the suitability of the products described here for any purpose or application, or to the efficiency, production rate, or useful life of these products. All estimates regarding production rates or finishes are the responsibility of the user and must be derived solely from the user's experience and expertise, not from information contained in this material.

It is possible that the products described in this material may be combined with other products by the user for purposes determined solely by the user. No representations are intended or made as to the suitability of, engineering balance of, or compliance with regulations or standard practice of any such combination of products or components the user may employ.

This equipment is only one component of a cabinet blasting operation. Other products, such as air compressors, air filters and receivers, abrasives, equipment for ventilating or dehumidifying, or other equipment, even if offered by Clemco, may have been manufactured or supplied by others. The information Clemco provides is intended to support the products Clemco manufactures. Users must contact each manufacturer and supplier of products used in the blast operation for warnings, information, training, and instruction relating to the proper and safe use of their equipment.

© 2019 CLEMCO INDUSTRIES CORP.  
One Cable Car Dr.  
Washington, MO 63090  
Phone (636) 239-4300  
Fax (800) 726-7559  
Email: [info@clemcoindustries.com](mailto:info@clemcoindustries.com)  
[www.clemcoindustries.com](http://www.clemcoindustries.com)



**1.0 INTRODUCTION**

**1.1 Scope of Manual**

1.1.1 These instructions cover set up, operation, maintenance, troubleshooting, optional accessories, and replacement parts for BNP-55 series suction blast cabinets. The instructions covers the operation of all pull-thru reclaimers and the installation of the dust collector. One of the following supplemental manuals is provided with the dust collector. Refer to the appropriate manual for installation, operation, and maintenance of the collector:

- CDC-1 Dust Collectors, manual stock no. .. 28225
- RPC-2 Dust Collector, manual stock no. ....22788

1.1.2 These instructions also contain important information required for safe operation of the cabinet. Before using this equipment, all personnel associated with the blast cabinet's operation must read this entire manual and all accessory manuals to become familiar with their operation, parts and terminology.

**1.2 Safety Alerts**

1.2.1 Clemco uses safety alert signal words, based on ANSI Z535.4-2011, to alert the user of a potentially hazardous situation that may be encountered while operating this equipment. ANSI's definitions of the signal words are as follows:



**This is the safety alert symbol. It is used to alert you to potential physical injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.**

**NOTICE**

**Notice indicates information that is considered important, but not hazard-related, if not avoided, could result in property damage.**

**CAUTION**

**Caution indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.**

**WARNING**

**Warning indicates a hazardous situation that, if not avoided, could result in death or serious injury.**

**DANGER**

**Danger indicates a hazardous situation that, if not avoided, will result in death or serious injury.**

**1.3 Table of Contents**

SUBJECT	SECTION LOCATION
<b>INTRODUCTION</b> .....	<b>1.0</b>
Scope of Manual .....	1.1
Safety Alerts .....	1.2
Table of Contents .....	1.3
General Description .....	1.4
Theory of Operation .....	1.5
Reverse-Pulse Dust Collector Options .....	1.6
Nozzle Options .....	1.7
Reclaimer Options .....	1.8
Blasting Media .....	1.9
Compressed Air Requirements .....	1.10
Electrical Requirements .....	1.11
<b>INSTALLATION</b> .....	<b>2.0</b>
General Installation Notes .....	2.1
Connect Conveying (flex) Hose .....	2.2
Connect Compressed-Air Supply Lines .....	2.3
Ground the Cabinet and Dust Collector .....	2.4
Connect Electrical Service .....	2.5
Standard single-phase wiring .....	2.5.1
Optional three-phase wiring .....	2.5.2
Set Air-Inlet Damper .....	2.6
Final Assembly .....	2.7
<b>FIELD INSTALLED ACCESSORIES</b> .....	<b>3.0</b>
Aluminum Oxide (aggressive media) Kit .....	3.1
Cabinet Curtains Installation .....	3.2
Manometer .....	3.3
Armrest .....	3.4
Track and Low Profile Table .....	3.5
<b>OPERATION</b> .....	<b>4.0</b>
Media Loading .....	4.1
Media Unloading .....	4.2
Loading and Unloading Parts .....	4.3
Blasting Operation .....	4.4
Blasting Technique .....	4.5
Stop Blasting .....	4.6
Shutdown .....	4.7

<b>ADJUSTMENTS</b> .....	<b>5.0</b>	Dust leaking from cabinet .....	8.15
Blasting Pressure (pilot regulator) .....	5.1	Dust leaking from dust collector .....	8.16
Air Jet Adjustment .....	5.2	<b>ACCESSORIES AND REPLACEMENT PARTS</b> .....	<b>9.0</b>
Media-Air Mixture (media flow) .....	5.3	Optional Accessories .....	9.1
Reclaimer Static Pressure .....	5.4	Cabinet Replacement Parts .....	9.2
Optional Externally Adjustable Vortex Cylinder .....	5.5	BNP® Gun and Hose Assembly .....	9.3
Cabinet Air-Inlet Damper .....	5.6	Inlet-Air Regulator Assembly .....	9.4
Door Interlocks .....	5.7	View-Window Assembly .....	9.5
Optional Manometer .....	5.8	Metering Valve, BNP .....	9.6
<b>PREVENTIVE MAINTENANCE</b> .....	<b>6.0</b>	Foot Pedal Assembly .....	9.7
Daily Inspection and Maintenance Before Blasting .....	6.1	LED Light Assembly .....	9.8
Check media level .....	6.1.1	Cabinet Controls and Plumbing .....	9.9
Inspect reclaimer debris screen and door gasket .....	6.1.2	Replacement Reclaimer Assemblies .....	9.10
Drain compressed-air filter .....	6.1.3	300 CFM Reclaimer Replacement Parts .....	9.11
Inspect dust container .....	6.1.4	600 CFM Modular Reclaimer Replacement Parts .....	9.12
Daily Inspection During Blasting .....	6.2		
Inspect cabinet for dust leaks .....	6.2.1	<b>1.4 General Description</b>	
Check exhaust air for dust .....	6.2.2	<b>1.4.1</b> BNP blast cabinets enclose the blasting environment to provide efficient blasting while maintaining a clean surrounding work area. Production rates are influenced by size of nozzle, compressor output, working pressure, type and size of media, and angle and distance of the nozzle from the blast surface. BNP suction cabinets consist of three major components:	
Drain pulse reservoir .....	6.2.3	<ul style="list-style-type: none"> <li>• Cabinet Enclosure</li> <li>• Reclaimer</li> <li>• Dust Collector</li> </ul>	
Cartridge pulsing .....	6.2.4		
Weekly Inspection and Maint. Before Blasting .....	6.3	Refer to Figure 1 for arrangement of components with a CDC-1 Dust Collector. Figure 2 shows the arrangement with a RPC-2 600 cfm (not available in 300 cfm) Reverse-Pulse Dust Collector with dust drawer. To upgraded, an RPC-2 collector may be added at any time.	
Inspect view-window cover lens .....	6.3.1		
Inspect gloves .....	6.3.2		
Inspect BNP® gun assembly .....	6.3.3		
Inspect media hose .....	6.3.4		
Weekly Inspection During Blasting .....	6.4		
Inspect flex hose for leaks .....	6.4.1		
Monthly Inspection and Maintenance .....	6.5		
Reclaimer wear plate and liners .....	6.5.1		
Dust Collector .....	6.6		
<b>SERVICE MAINTENANCE</b> .....	<b>7.0</b>		
Gloves .....	7.1		
BNP® Gun Assembly .....	7.2		
View-Window Cover Lens .....	7.3		
View-Window Replacement .....	7.4		
Window-Gasket Replacement .....	7.5		
Window-Frame Removal .....	7.6		
LED Light Assembly .....	7.7		
Replacing Reclaimer Wear Plate .....	7.8		
Replacing or Installing Rubber Reclaimer Liners .....	7.9		
Replacing or Removing Reclaimer Inlet Baffle .....	7.10		
Reverse-Pulse Dust Collector .....	7.11		
<b>TROUBLESHOOTING</b> .....	<b>8.0</b>		
Poor visibility .....	8.1		
Abnormally high media consumption .....	8.2		
Reduction in blast cleaning rate .....	8.3		
Plugged nozzle .....	8.4		
Media bridging .....	8.5		
Media Surge .....	8.6		
Blockage in Media Hose .....	8.7		
Poor Suction in Media Hose .....	8.8		
Air only (no media) from Nozzle .....	8.9		
Blowback through media hose .....	8.10		
Blasting does not begin when foot pedal is pressed .....	8.11		
Blasting continues after foot pedal is released .....	8.12		
Media buildup in cabinet hopper .....	8.13		
Static Shocks .....	8.14		

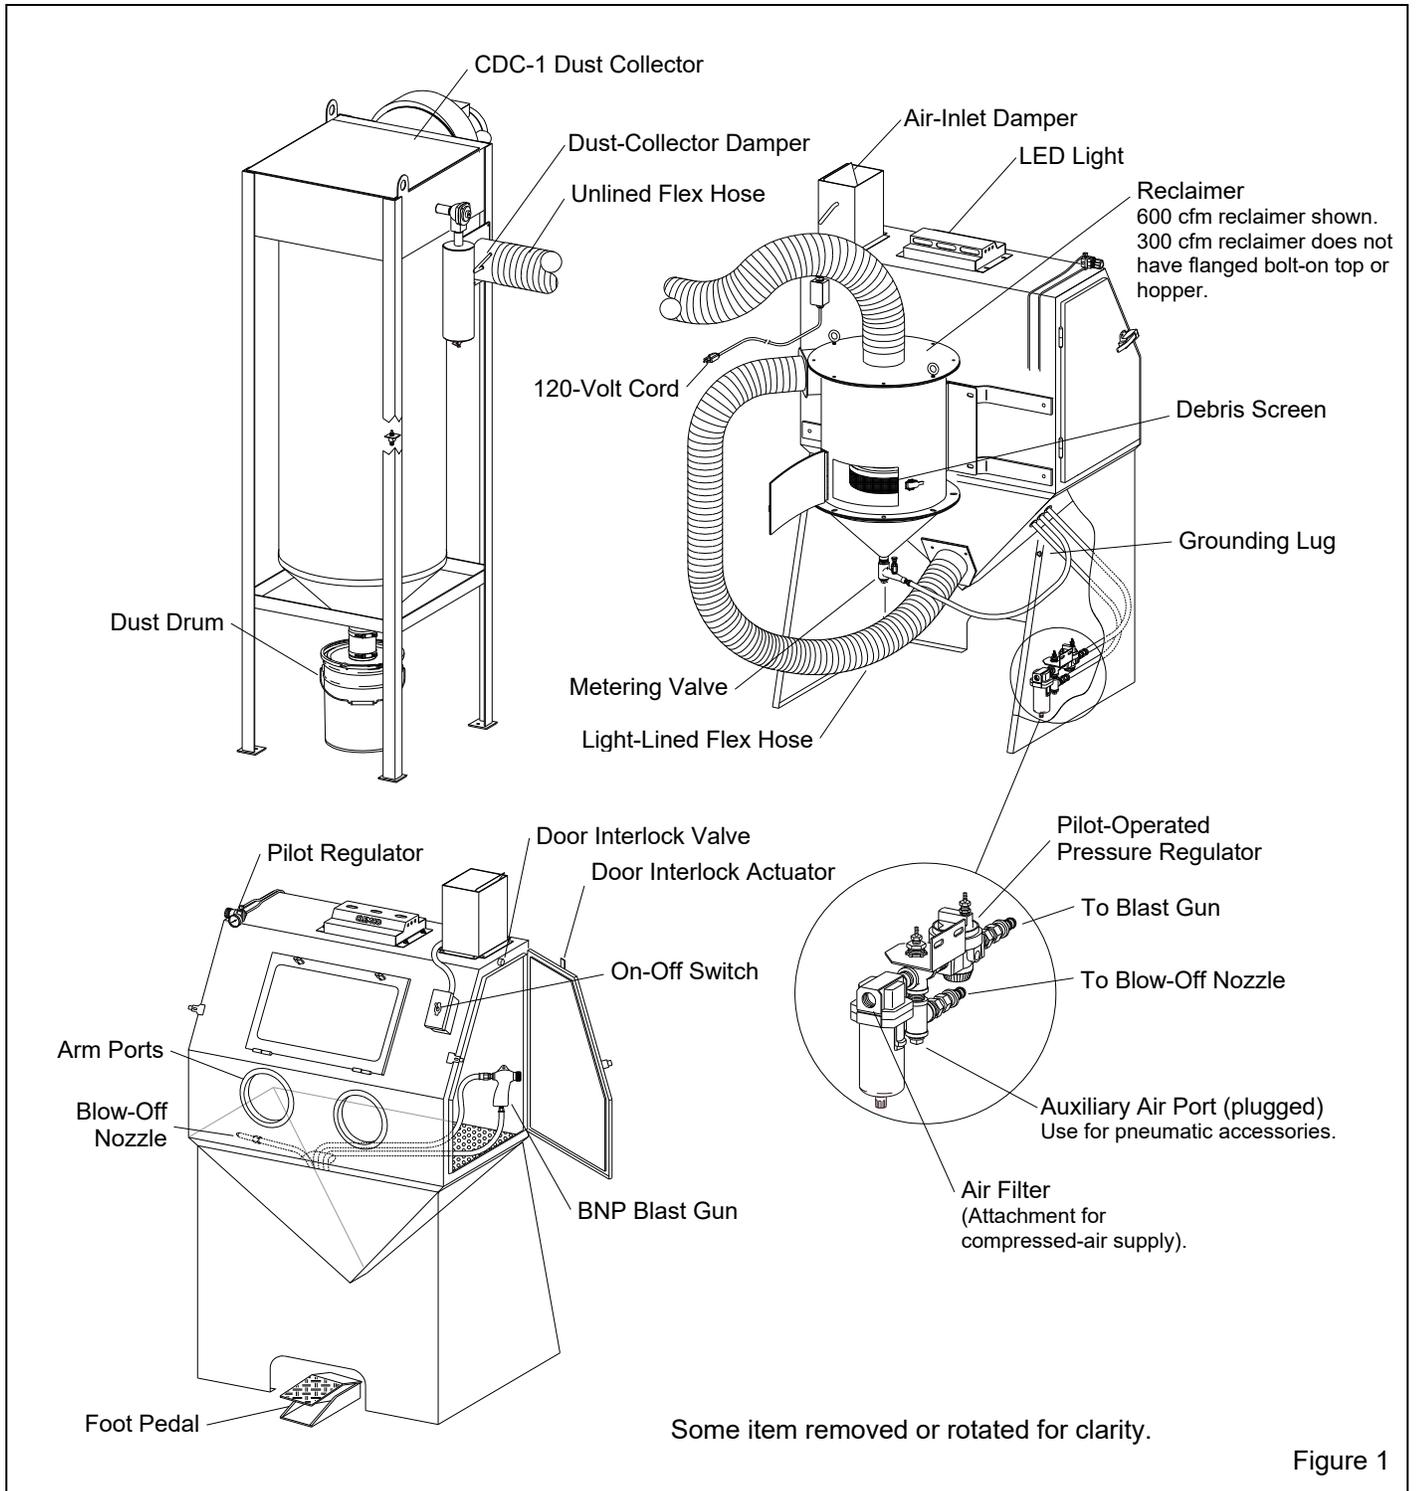


Figure 1


## 1.6 Reverse-Pulse Dust Collector Options

### **⚠ WARNING**

All dust is hazardous to breath. Emissions can occur from the dust collection system. Identify all materials that are to be removed by blasting; if any toxic materials such as lead dust or dust from other heavy metals and corrosives, or any other toxic materials are being removed, use a HEPA afterfilter to assist in maintaining inhalation hazards below the permissible exposure limits (PELs). Prolonged exposure to any dust can result in serious lung disease and death. Short-term ingestion of toxic materials can cause serious respiratory injury or death. Filtration may not be adequate in reducing all inhalation hazards. It remains the employer or user's responsibility to ensure all emissions are safe to breath.

**1.6.1 CDC-1 Dust Collector:** Shown in Figure 1, the collector is available in 300 and 600 models. The single filter cartridge is cleaned by using a manually-controlled pulse of compressed air. Dust collects in a 5-gallon dust drum and must be frequently emptied. CDC-1 Dust Collectors are standard with BNP cabinets unless an optional RPC-2 Dust Collector is ordered at time of purchase. Refer to manual number 28225 for operation of the CDC-1 Dust Collector.

**1.6.2 RPC-2 Dust Collector:** Shown in Figure 2, this collector is available in a 600 cfm model. Dual filter cartridges are automatically cleaned by a timed, periodic pulse of compressed air. Dust collects in the draw must be frequently emptied. Refer to manual number 22788 for operation of the RPC-2 Dust Collector.

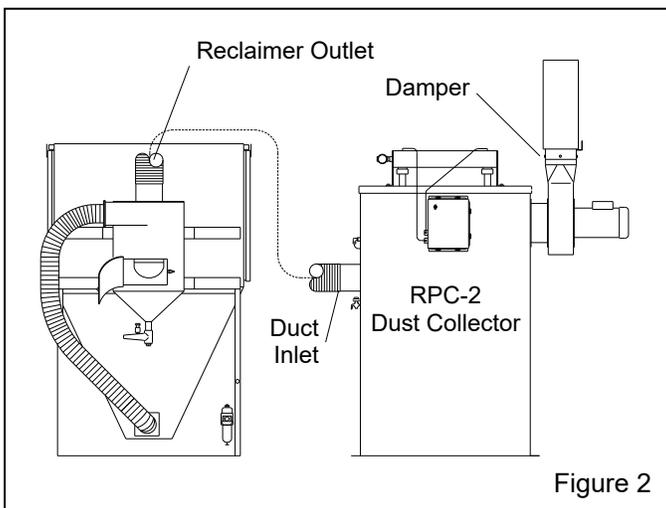

**1.6.3 HEPA (high-efficiency particulate air) Filter:** An optional HEPA afterfilter provides additional filtration and must be used with a reverse-pulse cartridge collector when removing toxic coatings, heavy metals, or any other toxic materials. Refer to the applicable dust-collector manual noted in Paragraph 1.1.1 for the HEPA option.

## 1.7 Nozzle Options

**1.7.1** Unless otherwise specified at the time of purchase, the cabinet is provided with a No. 5 (5/16" orifice) ceramic nozzle and No. 5 (5/32" orifice) air jet. Optional, more durable tungsten carbide and boron carbide nozzles are available and are shown under *BNP Gun and Feed Assembly in Section 9.3*. Use a boron carbide nozzle when blasting with aggressive media, as noted in Section 1.9.4.

## 1.8 Reclaimer Options

**1.8.1 Replaceable rubber reclaimer liners:** Rubber liners are available for 600 cfm reclaimers that have a removable top and are designed to accept liners. Liners are not available for 300 cfm reclaimers. The liners prolong service life of the reclaimer and should be installed when using silicon carbide, aluminum oxide, or other aggressive media, as noted in Section 1.9.4. Rubber liners are shown on Page 30, Figure 31.

**1.8.2 Externally adjustable vortex option:** Not available for 300 cfm reclaimer. The vortex is available for 600 cfm reclaimers only. It fine-tunes media separation; refer to Section 5.5 for additional information. The vortex is an option when the cabinet is provided with a CDC-1 Dust Collector but is standard on 600 cfm reclaimers when the cabinet is provided from the factory with an RPC-2 Dust Collector.

## 1.9 Blasting Media

**1.9.1** Always use media specifically manufactured for blasting and that are compatible with the surface being blasted. Media produced for other applications may be inconsistent in size and shape, contain particles that could jam the media metering valve, or cause irregular wear. Always obtain the safety data sheet (SDS) for the blasting media prior to blasting and identify material being removed by blasting, paying particular attention to worker health risks and presence of any hazardous/toxic substances.

Most common reusable media specifically manufactured for blasting can be used in ZERO cabinets. The listing of media sizes shown in this section and in Figure 3 are provided as a guideline only. The guideline is based on standard 5/32" orifice air jet with 5/16" nozzle and average conditions with variables such as blast

pressure, media-air mixture, visibility inside the cabinet, humidity, and reclaimer cleaning rate.

Several variables that affect the reclaimer cleaning rate include reclaimer size (cfm), contamination of parts being blasted, media friability, damper setting (static pressure), and dust-collector filter loading (differential pressure across the dust filters).

As a rule, larger orifice air jets and nozzles deliver more media, requiring higher performance from the reclaimer. When using larger nozzles, the maximum mesh size of media will be smaller than normally recommended. Using media finer than those recommended may decrease visibility and, at some point, carry over to the dust collector. Media coarser than those recommended may be too dense for the reclaimer to recover from the cabinet hopper.

**1.9.2 Steel shot and steel grit:** Steel grit or shot are too heavy to use in BNP-55 Cabinets.

**1.9.3 Sand and slag:** Sand and slag media are not suitable for cabinet use. Sand should NEVER be used for abrasive blasting because of the respiratory hazards associated with media containing free silica. Slags are not recommended for cabinet use because they rapidly break down and are not recyclable.

**1.9.4 Silicon carbide, aluminum oxide, and garnet:** These are the most aggressive of the commonly used media. Aggressive media may be used, but the service life of any components exposed to the media will be reduced. To avoid unscheduled downtime and maximize cabinet life, periodically inspect the reclaimer wear plate, blast hose, and nozzle for wear and replace parts as needed.

When using aggressive media only occasionally, install an optional aluminum oxide kit, which includes rubber curtains for the cabinet interior and a boron carbide-lined nozzle. When using aggressive media on a regular basis, install the aluminum oxide kit and a fully rubber-lined reclaimer. Rubber-liners are not available for 300 cfm reclaimers. Liners for 600 cfm reclaimers can be factory-installed items, or field-installed later on reclaimers if they have removable tops and are designed to accept liners. Nozzles lined with boron carbide extend nozzle wear life. Refer to *Section 9.3: BNP Gun and Feed Assembly*.

**1.9.5 Glass bead:** Most beads are treated to ensure free-flow operation, even in environments of moderately high humidity. Glass beads subjected to excessive moisture may be reused only after thoroughly drying and breaking up of any clumps.

**1.9.6 Lightweight and fine-mesh media:** When using lightweight (such as agricultural) media or fine-mesh (180-mesh and finer) media, the reclaimer inlet baffle may need to be removed to retain media and avoid carry over. On 600 cfm reclaimers with bolt-on removable tops, baffle removal and replacement is easily accomplished, as explained in Section 7.10. Reclaimers with welded-on tops require grinding to remove the baffle, and once it is removed, it cannot be replaced.

**1.9.7 Plastic media:** Plastic and similar lightweight and/or nonaggressive media are generally not recommended for suction-style cabinets because the lower blast velocity of suction blasting combined with the softer and lighter weight media do not provide the media impact for productive blasting. Best performance from plastic media is achieved with pressure blasting, requiring a pressure vessel with a 60-degree conical bottom. Refer to Clemco's AEROLYTE cabinet line.

This table offers a guideline to media type and selection based on standard 5/32" orifice air jet with 5/16" nozzle and average conditions, such as air pressure, media-air mixture, visibility, contamination of parts being cleaned, humidity, media friability, reclaimer cleaning rate, etc. As a rule, larger nozzles deliver more media, requiring higher performance from the reclaimer. Larger air jets and nozzles decrease the maximum mesh size of media from those recommended. Media that is finer than those recommended may decrease visibility and increase carry over to the dust collector. Media coarser than those recommended may be too dense for the reclaimer to recover from the cabinet hopper.

RECLAIMER SIZE	MEDIA TYPE					
	STEEL GRIT	STEEL SHOT	GLASS BEAD	ALUM. OXIDE	FINE MESH	LIGHT WT.
*300 cfm w/4" inlet	Do not use	Do not use	No. 6 to No. 12	60 to 180-mesh	See 1.9.6	See 1.9.7
*600 cfm w/5" inlet	Do not use	Do not use	No. 6 to No. 12	54 to 180-mesh	See 1.9.6	See 1.9.7

\* Standard reclaimer inlets

Figure 3

**1.9.8 Bicarbonate of soda:** Bicarbonate of soda is not recommended for use in standard cabinets. Bicarb is a one-use media, which will quickly saturate the filter cartridge(s). Best performance from bicarb media is achieved with pressure blasting, requiring a pressure vessel. Refer to Clemco's AEROLYTE cabinet line for cabinets that are specifically designed for use with bicarbonate of soda.

## 1.10 Compressed-Air Requirements

**1.10.1** The size of the compressor required to operate the cabinet depends on the size of the air jet and blasting pressure. Unless otherwise specified, cabinets are supplied with a No. 5 (5/32" orifice) jet. Refer to the table in Figure 4 to determine cfm requirements. Consult with a compressor supplier for suggested compressor size based on the air consumption. **NOTE: A separate air line is required for the reverse-pulse dust collector. If preferred, remove the plug from the auxiliary air port (shown in Figure 4) and connect a 1/4" ID or larger air line to the dust-collector pulse reservoir. Refer to the dust-collector owner's manual for setup instructions.**

BNP Gun	Jet Orifice	Nozzle Orifice	CFM	PSI
No. 4	1/8"	5/16"	21	80
No. 5	5/32"	5/16"	32	80
No. 6	3/16"	3/8"	47	80
*No. 7	7/32"	7/16"	62	80
*No. 8	1/4"	1/2"	86	80

\* Using this combination could affect usable media size; refer to Section 1.9.

Figure 4

**1.10.2** The air filter at the air-inlet connection reduces condensed water from the compressed air. Its use is especially important in areas of high humidity or when using fine-mesh media. Moisture causes media to clump and inhibits free flow through the feed assembly. If the filter does not remove enough moisture to keep media dry and flowing, it may be necessary to install an air dryer or aftercooler in the air-supply line.

## 1.11 Electrical Requirements

Standard 300 cfm and 600 cfm cabinets and dust collectors are 120-volt single phase. Incoming power to the cabinet is supplied by a U-ground plug; plug it into a 120-volt outlet.

All wiring external of the cabinet is provided by the user to comply with local electrical codes.

**1.11.1** Electrical requirements depend on the size and phase of the dust-collector exhaust motor. NOTE: Full load amps (FLA) shown below are for the motor only; the lights draw less than 1 amp. Standard cabinets are supplied as follows:

300 cfm: 1/2 HP, 120/208/240 V, 1-PH, 60 HZ,  
wired 120, FLA 20/7, 208/3.4, 240/3.5.  
600 cfm: 1 HP, 120/240 V, 1-PH, 60 HZ,  
wired 120, FLA 120/12, 208/6.6, 240/6.2.

Refer to Section 2.5 to connect electrical service

## 2.0 INSTALLATION

Unless noted otherwise, the sequence of assembly in Sections 2.2 through 2.7 may be done in any order that is convenient for the installer.

### 2.1 General Installation Notes

**2.1.1** Refer to Figure 1 (and Figure 2 for optional RPC-2 Dust Collector) for the general arrangement. Place all components in a convenient location where compressed air and electrical service are available. The cabinet location must comply with OSHA and local safety codes. Allow for full access to all doors and service areas, and for efficient handling of large parts. Provide enough clearance at the dust collector to do maintenance and to remove the dust container. Determine the best location for all components and position them before making compressed air connections, electrical connections, and attaching flex hose.

**2.1.2** Refer to the dust-collector owner's manual to set up the dust collector and prepare it for operation.

### 2.2 Connect Conveying (flex) Hose

**2.2.1** Connect the smaller-diameter flex hose between the cabinet-hopper pipe adaptor and reclaimer inlet adaptor, and connect the larger-diameter hose between the reclaimer outlet and dust-collector inlet. It is easier to slip the hose over the adaptors and create a tighter seal if the first two or three inches of wire are removed from the inside of the hose. Use care not to damage the hose. Clamp flex hose securely in position with worm clamps provided. **NOTE: The hose wire helps dissipate static electricity in the conveying hose and helps ground each segment. In order for the hose wire to dissipate static electricity, the wire must touch the metal of each segment.**

### 2.3 Connect Compressed-Air-Supply Lines

A separate air line is required for the dust-collector pulse. The line may be connected to the auxiliary-air port on the cabinet plumbing, as shown in Figure 6.

## ⚠ WARNING

Failure to observe the following before connecting the equipment to the compressed-air source can cause serious injury or death from the sudden release of trapped compressed air:

- Lockout and tagout the compressed-air supply.
- Bleed the compressed-air-supply line.

## ⚠ WARNING

To avoid the risk of injury from compressed air, install an isolation valve and bleed-off valve where the air supply is tapped into the compressed-air system. This enables a lockout and tagout procedure and depressurization of the compressed-air line before performing maintenance.

**2.3.1** Refer to Paragraph 2.3.2 to determine the recommended air-supply hose size, then refer to Figure 6 and apply thread sealant to the male threads of an air fitting that is compatible with the air-supply hose fitting, and install it onto the 1/2-NPT air filter located under the cabinet hopper. The style of connection shown in Figure 6 is for reference only.

**2.3.2** Refer to the table in Figure 5 to determine the minimum ID air-supply line to the cabinet air inlet. A smaller diameter hose may reduce blasting efficiency.

MINIMUM COMPRESSED-AIR LINE ID

Air Line Length	Air Jet Size		
	No. 4	No. 5	No. 6
25 feet	3/4"	3/4"	1"
50 feet	3/4"	3/4"	1"
75 feet	3/4"	1"	1"
100 feet	3/4"	1"	1"

Figure 5

**2.3.3** Connect the air line from the air source to the air filter inlet.

## ⚠ WARNING

Hose disconnection while under pressure can cause serious injury or death. Use safety lock pins or safety wire to lock twist-on couplings together and prevent accidental separation, and also use safety cables to prevent hose from whipping should separation occur. Safety lock pins and safety cables are listed in *Section 9.1: Optional Accessories*.

**2.3.4** Refer to the dust-collector owner's manual and connect a compressed-air line to the pulse manifold.

### 2.4 Ground the Cabinet and Dust Collector

**2.4.1** To prevent static electricity buildup, attach an external grounded wire from an earth ground to the grounding lug on the left rear of the cabinet. Refer to the dust-collector owner's manual and connect a ground wire to the dust collector.

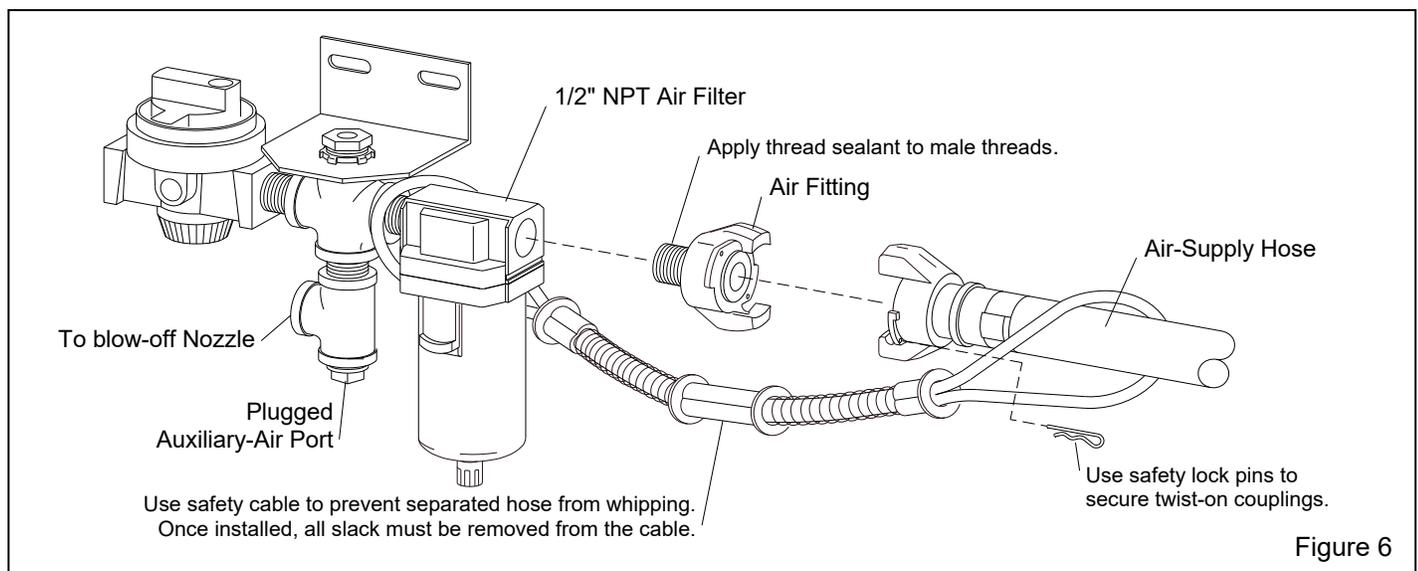


Figure 6

## 2.5 Connect Electrical Service

### **⚠ WARNING**

**Shorting electrical components can result in serious injury or death from electrical shock or equipment damage. Electrical power must be locked out and tagged out before performing any electrical work. All electrical work or any work done inside a control panel or junction box must be performed by a qualified electrician, and comply with applicable codes.**

All wiring external to the cabinet is provided by the user to comply with local electrical codes.

#### 2.5.1 Standard single-phase wiring

**2.5.1.1** Standard 300 cfm and 600 cfm cabinets and dust collectors are wired 120-volt single-phase. Power to the cabinet is supplied by a U-ground plug; plug it into a 120-volt outlet.

### **⚠ WARNING**

**Do not use electrical adaptors that eliminate the ground prong on 120-volt plugs. Doing so can cause electric shock and equipment damage.**

**2.5.1.2** Refer to the wiring schematic in Figure 7 and wire the dust-collector motor, per instruction on the motor data plate, to the junction box mounted on the cabinet.

When wired, as noted in Figure 7, the dust-collector exhaustor motor will start when the cabinet light switch is turned ON and stop when the switch is turned OFF.

#### 2.5.2 Optional three-phase wiring

NOTE: a wiring schematic is packed inside the cabinet's control panel. After wiring is completed, keep a copy of the schematic with the manual for future reference and for electrical replacement parts.

**2.5.2.1** Refer to the wiring schematic stowed inside the control panel mounted on the cabinet and wire from the users disconnect to the panel and from the panel to the dust-collector motor, per instruction on the motor data plate.

**2.5.2.2** Check the amperage on initial start up; if the motor draws excessive amperage, gradually close the dust-collector damper, located on the inlet on CDC-1 Dust Collectors and on the exhaustor outlet on RPC-2 Dust Collectors, until the amperage is within the specifications shown on the motor plate.

**2.5.2.3** After wiring is completed, observe the warning that follows and check the motor rotation. To check rotation, turn the On-Off switch ON and quickly turn it OFF, causing the motor to rotate slowly. Look through the slots in the motor fan housing where rotation of the fan can easily be observed. Proper rotation is indicated by the arrow on the exhaustor housing; the fan should rotate toward the exhaustor outlet. If it rotates in reverse, change the wires, as noted on the motor plate to reverse rotation.

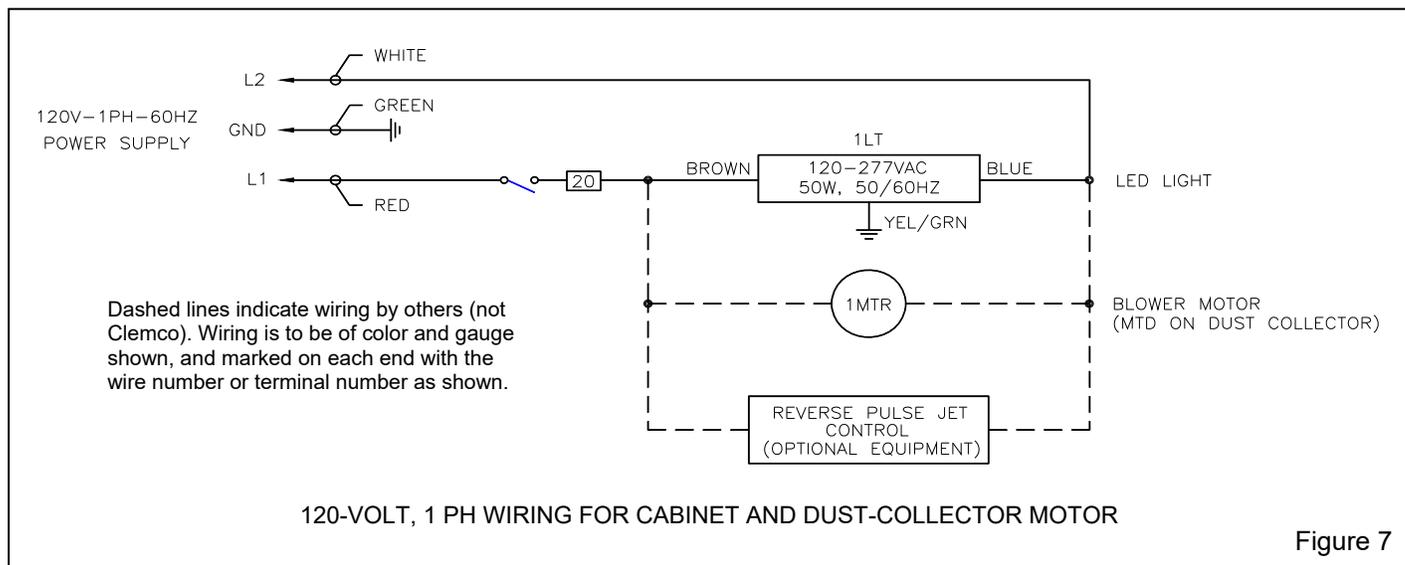


Figure 7

## **⚠ WARNING**

**Do not look into the exhauster outlet while the paddle wheel is turning. Injury to the eye or face can occur from objects being ejected from the exhauster.**

### 2.6 Set Air-Inlet Damper – Figure 8

**2.6.1** The air-inlet damper is located on the top of the cabinet and must be set to match the cabinet dimensions and reclaimer size. The air damper was preset prior to shipment; confirm the initial setting, as noted below.

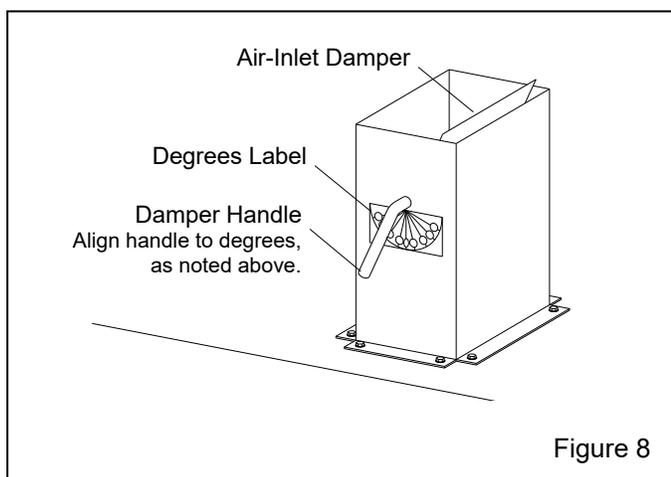


Figure 8

**2.6.2** The label on the damper shows the settings in degrees. The initial setting should align the handle as follows:

- 55 with 300 reclaimer ..... align handle to 30 degrees
- 55 with 600 reclaimer ..... align handle to 30 degrees

**2.6.3** Loosen the lock nuts and align the damper handle as noted. When correctly positioned, tighten the lock nuts to maintain the setting. Refer to Section 5.6 for adjustment procedure.

### 2.7 Final Assembly

**2.7.1** Position the foot pedal on the floor at the front of the cabinet.

**2.7.2** A package of five cover lenses is supplied with the cabinet. To install a cover lens, remove the adhesive backing and apply the lens to the clean, dry, inner surface of the view window, per Section 7.3. When the cover lens becomes pitted or frosted, replace it.

### 3.0 FIELD INSTALLED ACCESSORIES

Refer to Section 9.1 for Optional Accessories.

#### 3.1 Aluminum Oxide (aggressive media) Kit

**3.1.1** An optional aluminum oxide kit is available factory installed or may be field installed later.

**Factory-installed** kits consist of black-rubber cabinet curtains with grommets, curtain hardware, and a boron carbide nozzle.

**Field-installed** (or replacement factory-installed) kits consist of black-rubber cabinet curtains (refer to Section 3.2 for curtain installation) and light-lined flex hose. If the existing flex hose is in good condition, reserve the new hose for future replacement.

#### 3.2 Cabinet Curtains Installation

**3.2.1** Match curtains to corresponding wall and doors.

**3.2.2 Front and rear walls:** Position the curtain on the wall to be protected. Using the curtains as templates, mark each mounting point through the grommet holes along the upper edge of the curtain. **NOTE:** When laying out the attachment points, the upper edge of the rear curtain should be below the bottom edge of the air-duct partition. Remove the curtains and drill a .187" (3/16") diameter hole at each point marked. Install the curtains using the fasteners provided (machine screw, 11/16" OD flat washer, lock washer, and nut) at each grommet. The flat washer is used between the screw head and the curtain grommet on all curtains.

**3.2.3 Doors:** Using protectors against the curtains and outer doors; clamp the door curtains in place. **NOTE:** When laying out the attachment points, the upper edges of the door curtains should be even with the outer edges of the door's soundproofing panel. Insert a #10 self-drilling screw with an 11/16" OD flat washer through the grommet holes. Use a screw gun with a 5/16" socket to drill and thread the screws through the door's inner wall at each grommet.

#### 3.3 Manometer

**3.3.1** Consistent static pressure is necessary for precise media separation, as the reclaimer's efficiency is achieved by a centrifugal balance of air flow, particle weight, and size. The manometer measures static pressure. Reclaimer static pressure is set by adjusting the dust-collector damper. Refer to Section 5.4 to adjust static pressure. Refer to Section 5.8 for instructions on using the manometer.

### 3.4 Armrest

**3.4.1** Assemble the armrest and mounting brackets, as shown in Figure 9.

**3.4.2** Position the assembly so the armrest is about even with the bottom of the arm-port opening. Mark one hole location on the front of the cabinet at each mounting bracket.

**3.4.3** Drill a 3/8" hole at both locations and mount the armrest using 5/16 cap screw, washers, and nuts. Install the bolts from inside the cabinet to protect the threads from abrasion, should the armrest need to be removed later

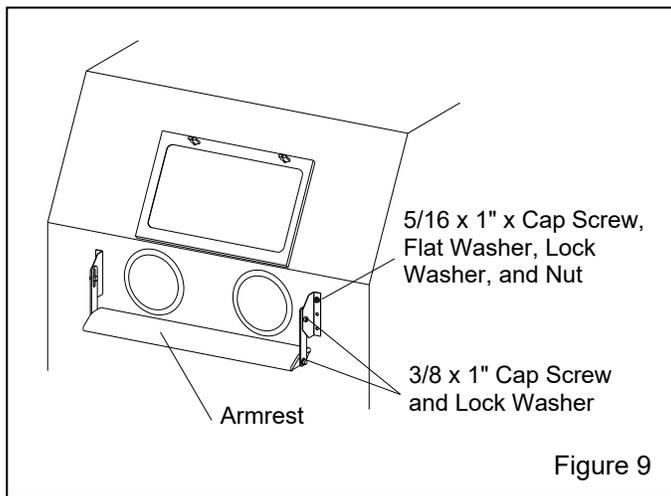


Figure 9

**3.4.4** Match drill the remaining four bracket holes and install the remaining fasteners.

**3.4.5** Loosen the fasteners on the slotted bracket and raise or lower the armrest to a comfortable position.

### 3.5 Track and Low Profile Table Maximum Weight Capacity 500 Lbs

**3.5.1** Components of track and table assembly are shown in Figure 10. The assembly consists of:

- Track assembly: mounts inside the cabinet.
- Table assembly: rollers on sliding table fit inside the track rails.
- All necessary mounting fasteners.

The track may be installed on either side of the cabinet, so the table can slide out through either the right side or left side door. The right side is shown in the illustrations.

**3.5.2** Combine the table assembly and track by sliding the table assembly rollers into the track channels, as shown in Figure 11.

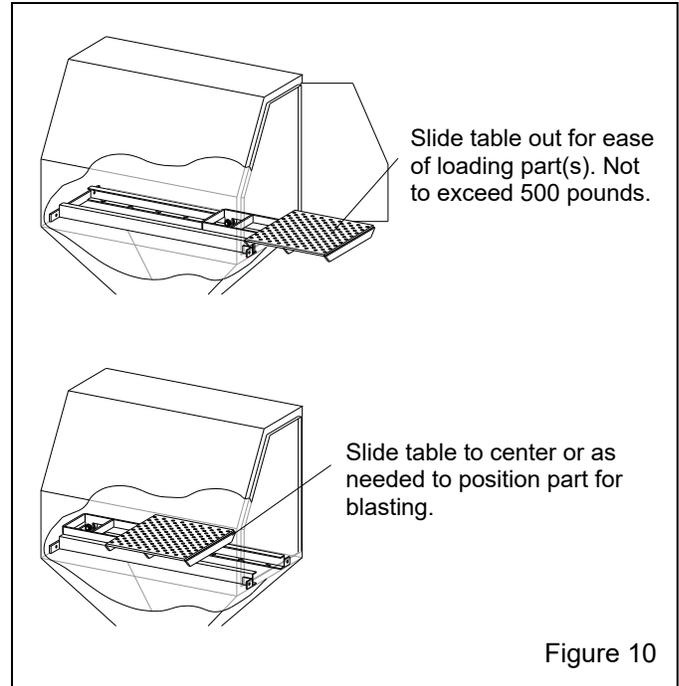


Figure 10

**NOTE:** If the weight of the table and track make it too heavy to install as an assembly, the track may be placed inside the cabinet to predrill mounting holes, but the table must be placed within the rails before fasteners are installed.

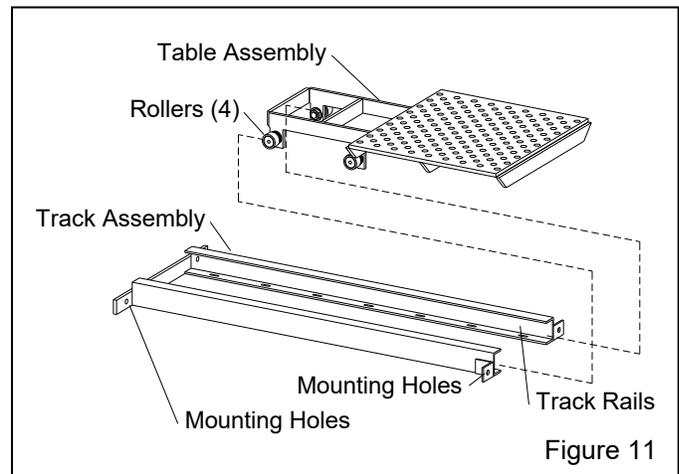


Figure 11

**3.5.3** Center the track and table assembly inside the cabinet on top of the grate. Make sure the two angled mounting brackets are facing toward the door from which the table will slide, refer to Figure 12.

**3.5.4** Match drill two 1/2" diameter holes on each side of the cabinet, using the holes in the mounting brackets as a template. **NOTE:** To prevent the track from shifting, temporarily place a 3/8-NC x 1-1/2" bolt through each hole after it is drilled.

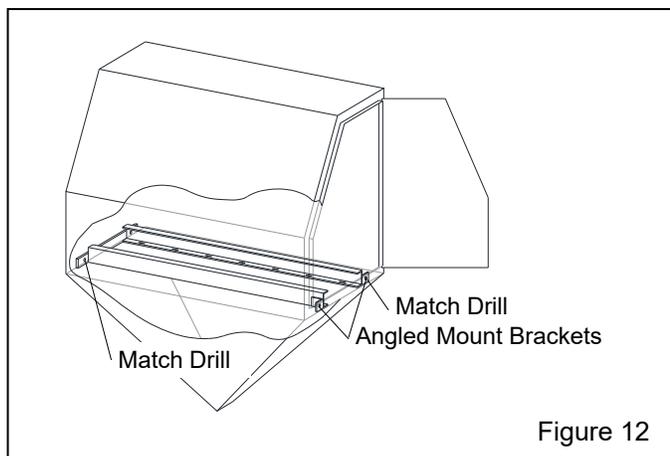


Figure 12

**3.5.5** After the holes are drilled and the table assembly is placed in the track rails, secure all fasteners.

## 4.0 OPERATION

### **NOTICE**

**Do not pulse new dust collectors or replacement cartridges until the cartridges are properly seasoned, as instructed in the dust-collector owner's manual. Pulsing unseasoned cartridges could cause premature cartridge failure and decrease the efficiency of dust collector.**

### 4.1 Media Loading

**4.1.1 Media capacity:** The approximate capacity and minimum media amount is shown in the table below.

Reclaimer Size	Minimum Wt.	Capacity
300 cfm	10 lbs	50 lbs (0.5 cuft)
600 cfm	20 lbs	75 lbs (0.75 cuft)

**4.1.2 Media loading:** With the exhauster OFF, add clean, dry media, by pouring it through the reclaimer door. Do not fill above the hopper on the reclaimer. **Do not pour media directly into the cabinet hopper, as overfilling may occur.** Overfilling will result in media carry over to the dust collector and possible blockage in the conveying hose. Refill only after all media has been recovered from the cabinet.

### 4.2 Media Unloading – Figure 13

**4.2.1** To empty the cabinet and reclaimer of media, blow off the cabinet interior and run the exhauster until all media is recovered from the cabinet. Turn OFF the exhauster, and place an empty bucket of other container under the metering valve. Unscrew the plastic plug from the metering valve, permitting media to flow into the bucket. If media does not flow, it has caked; open the fill door and stir media until it starts to flow. Before the container becomes too heavy to easily manage, replace the plug and empty the container. Replace the plug when the reclaimer is empty or, if changing media type, purge the media hose, as noted below.

**4.2.2** To purge the media hose, before replacing the plug turn ON the exhauster, grasp the gun, and press the foot pedal using the gun to blow off the cabinet interior until the air from the gun and the cabinet are clear. Turn OFF the exhauster and replace the plug.

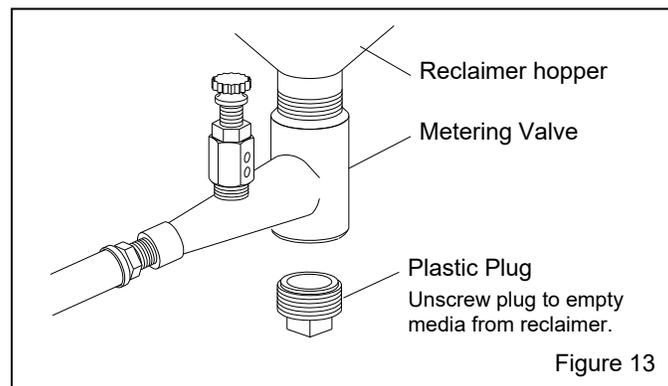


Figure 13

### 4.3 Loading and Unloading Parts

### **WARNING**

**Use solid fixturing to hold heavy parts in place. Do not remove lift equipment until the part is adequately supported to prevent movement. Moving heavy, unsupported parts may cause them to shift or topple and cause severe injury. This is especially important with the use of turntables and tables with tracks.**

**NOTE: Parts must be free of oil, water, grease, or other contaminants that will clump media or clog filter cartridge(s).**

**4.3.1** Load and unload parts through either door.

**4.3.2** When blasting small parts or objects having small pieces that could become dislodged and fall off, place an appropriately sized screen over the grate (or

under the grate when frequently blasting small parts) to prevent parts from falling into the hopper. If an object should fall through the grate, stop blasting immediately and retrieve it.

**4.3.3** Close door; the door interlock system will prevent blasting if either door is open.

#### 4.4 Blasting Operation

### WARNING

To avoid the inhalation of dust, which can cause respiratory illness from short-term inhalation or death from long-term inhalation:

- Use the blow-off nozzle to blow media off parts before opening doors.
- After blasting, keep doors closed and exhauster running until the cabinet is clear of all airborne dust.
- Always close cabinet, reclaimer, and dust-collector doors before blasting. Keep all doors closed during blasting.
- Always wear blast gloves.
- Stop blasting immediately if dust leaks are detected.

**4.4.1** Slowly open the air valve on the air-supply hose to the cabinet. Check for air leaks on the initial startup and periodically thereafter.

**4.4.2** Turn ON the lights and exhauster. The ON/OFF switch located on the light shield performs both functions.

**4.4.3** Load parts.

**4.4.4** Close door; the door interlock system will prevent blasting if either door is open.

**4.4.5** Adjust the pilot-pressure regulator located on the upper-left side of the cabinet to the required blast pressure, per Section 5.1.

**4.4.6** Insert hands into rubber gloves.

**4.4.7** To blast, hold the gun firmly, point the gun toward the object to be blasted, and apply pressure foot pressure to the top of the foot pedal; blasting will begin immediately.

### WARNING

**Shut down the cabinet immediately if dust discharges from the dust collector or cabinet. Make sure dust-collector filter(s) are correctly seated and not worn or damaged. Prolonged breathing of any dust can result in serious lung disease or death. Short-term ingestion of toxic dust such as lead, poses an immediate danger to health. Toxicity and health risk vary with type of media and dust generated by blasting. Identify all material being removed by blasting and obtain a safety data sheet (SDS) for the blast media.**

**4.4.8** When blasting parts off the grate, use a solid conductive backrest to support the part. Without this assist, especially with longer blasting operations, the operator will tire easily from resisting blast pressure, and static electricity could buildup in the ungrounded part and cause static shocks. Whenever possible, avoid holding small parts that require blasting into the glove.

**4.4.9** If an object should fall through the grate, stop blasting immediately and retrieve it.

#### 4.5 Blasting Technique

**4.5.1** Blasting technique is similar to spray painting technique. Smooth, continuous strokes are most effective. The distance from the part affects size of blast pattern. Under normal conditions, hold the nozzle approximately 3" to 6" from the surface of the part.

### NOTICE

**To prevent rapid frosting of the view window install a view window cover lens, per Section 7.3, and avoid pointing the blast nozzle toward the view window**

#### 4.6 Stop Blasting

**4.6.1** To stop blasting, remove foot pressure from the top of the foot pedal.

**4.6.2** Use the blow-off nozzle to blow media off cleaned parts.

**4.6.3** Keep doors closed and exhauster running until the cabinet is clear of all airborne dust.

**4.6.4** Unload parts.

## 4.7 Shutdown

**4.7.1** Shut off the air-supply valve, bleed the air-supply line, and drain the compressed-air filter and dust-collector pulse reservoir/manifold.


**4.7.2** Switch OFF the lights and exhauster.

## 5.0 ADJUSTMENTS

### 5.1 Blasting Pressure (pilot regulator)


**5.1.1** The pilot regulator (located on the top-left side of the cabinet), enables the user to adjust blasting pressure while blasting to suit the application. The suitable pressure for most purposes is about 80 psi. Lower pressures may be required on delicate substrates and will reduce media breakdown. Higher pressure may be required for difficult blasting jobs on durable substrates, but will increase media breakdown. If pressure is too high, suction in media hose will decrease, and if high enough cause blowback in the hose. Optimal production can only be achieved when pressure is carefully monitored.

**5.1.2** To adjust pressure, unlock the knob by pulling it out, as shown in Figure 14, and turn it clockwise to increase pressure or counterclockwise to decrease pressure. Pressure may drop slightly from closed-line pressure when blasting starts. Once operating pressure is set, push the knob in to lock it to maintain the setting.

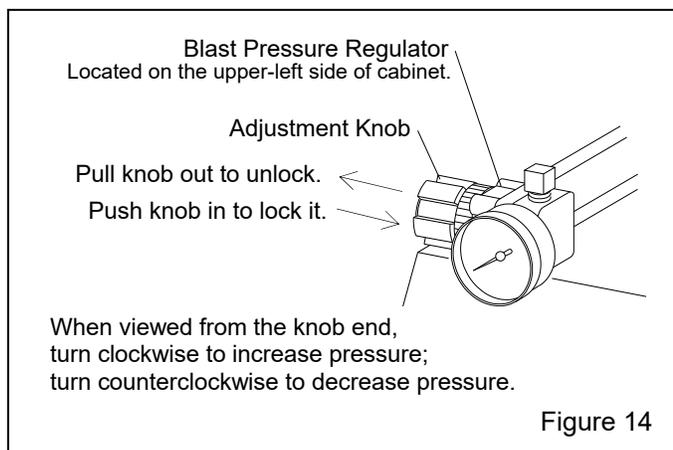

### 5.2 Air Jet Adjustment – Figure 15

**5.2.1** Thread the air jet 4-1/2 to 5 full turns into the gun body. Doing so will leave 3-1/2 to 4 threads exposed past the lock nut. Tighten the lock nut to maintain the setting. Refer to Section 9.3 for optional adjusting tool, which correctly positions the jet. Instructions are provided with the tool.

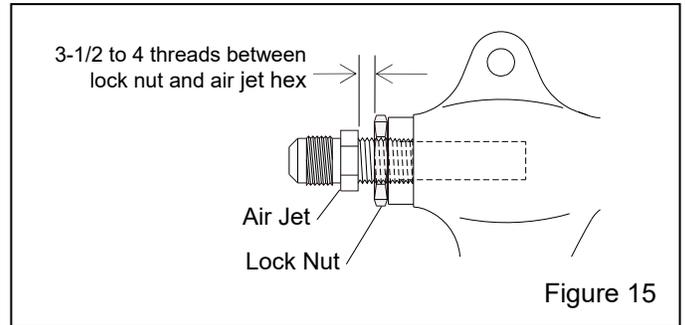


### 5.3 Media-Air Mixture (media flow) – Figure 16

**5.3.1** Check the media stream for correct media-air mixture; media flow should be smooth and appear as a light mist coming from the nozzle.

**5.3.2** If media does not flow smoothly, loosen the locking nut and adjust the metering screw until the upper holes in the metering stem are closed off and the lower holes are fully open, as shown in Figure 16. This adjustment is a starting point.

**5.3.3** If pulsation occurs in the media hose, either media is damp and caked, or not enough air is entering the media stream. While blasting, loosen the locking nut and slowly turn the adjusting screw out (counterclockwise when viewed from the top) until the media flows smoothly. Tighten the locking nut finger-tight to maintain the setting.

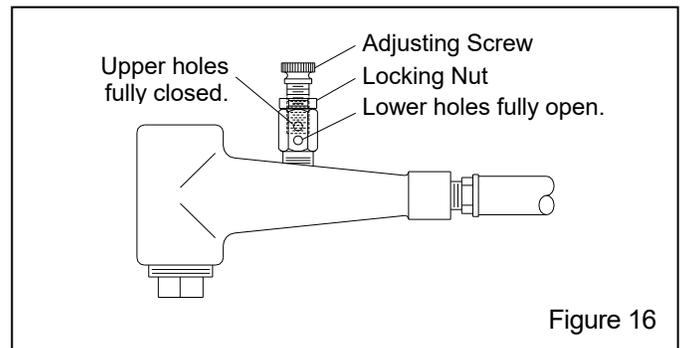

**5.3.4** If media flow is too light, decrease air in the mixture by turning the metering screw in (clockwise when viewed from the top), covering more of the holes so less air enters the media hose. Tighten the locking nut finger-tight to maintain the setting.

### 5.4 Reclaimer Static Pressure

**5.4.1** Correct static pressure varies with size of reclaimer and the size, weight, and type of media.

**5.4.2** Adjust static pressure by opening (handle in-line with air flow) or closing (handle perpendicular to air flow)

the dust-collector damper. Refer to the dust-collector owner's manual; the damper is located on the inlet on CDC-1 Dust Collectors, and on the exhaust outlet on RPC-2 Dust Collectors. If the damper is not opened far enough, the reclaimer will not remove fines, resulting in dusty media, poor visibility, and possible media blockage in the conveying hose. If the damper is opened too far, it may cause carry over (usable media carried into the dust collector) and result in excessive media consumption. Open only as far as necessary to obtain a balance of dust removal without media carry over.

**5.4.3** A manometer is useful when adjusting or monitoring static pressure. The manometer kit is listed in *Section 9.1: Optional Accessories*. Refer to Section 5.8 for manometer operation. The following are static-pressure starting points for given media. Static pressure may need to be lower with finer media, higher with coarser media. Run the media through several blast cycles, allowing the reclaimer to function with these settings. Inspect the media in the reclaimer and fines in the dust collector, as noted in Paragraph 5.4.2. Continue adjusting static pressure until optimum media cleaning without carry over is attained.

Glass Bead No. 4 to 7 .....	3" – 3-1/2"
Glass Bead No. 8 to 13 .....	2-1/2 – 3"
Aluminum Oxide 60-mesh & coarser .....	4 – 5"
Aluminum Oxide 80-mesh & finer .....	2-1/2 – 3"

**5.4.4** If the damper has been adjusted and carry over or excessive dust in the media continues, the optional externally adjustable vortex cylinder, not available for 300 cfm reclaimers, may help retain media. The vortex cylinder is usually required only when using 180-mesh and finer media, or lightweight media. Refer to Section 5.5.

## 5.5 Optional, Externally Adjustable Vortex Cylinder

Not available for 300 cfm reclaimer

The externally adjustable vortex is an option when the cabinet is provided with a CDC-1 Dust Collector. The vortex is standard with 600 cfm reclaimers when the cabinet is provided from the factory with an RPC-2 Dust Collector.


The vortex cylinder fine tunes media separation. Before adjusting the cylinder, adjust the damper on the dust collector to increase or decrease static pressure, per Section 5.4. Once the damper is adjusted, adjust the cylinder.

**5.5.1** The vortex cylinder is located atop the reclaimer where the flex hose connects. Adjustments are made by loosening the handle's tensioning knob and moving the handle to achieve the correct setting. When the correct

setting is established, tighten the locking knob to prevent movement. Start with the lever slightly to the right (about 1 o'clock, as shown in Figure 17) of the vertical position.

**5.5.2 To remove more fines:** (Too much dust in media.) Raise the cylinder by moving the lever left toward COARSE in 1/4" increments at the indicator plate. Allow the media to go through several blast cycles before determining if further adjustment is needed.

**5.5.3 To remove fewer fines:** (Excessive usable media is carried to the dust collector.) Lower the vortex cylinder by moving the lever right toward FINE in 1/4" increments at the indicator plate. NOTE: If the cylinder is lowered too far, the reclaimer will again begin to allow usable media to be carried over, which causes abnormally high static pressure.

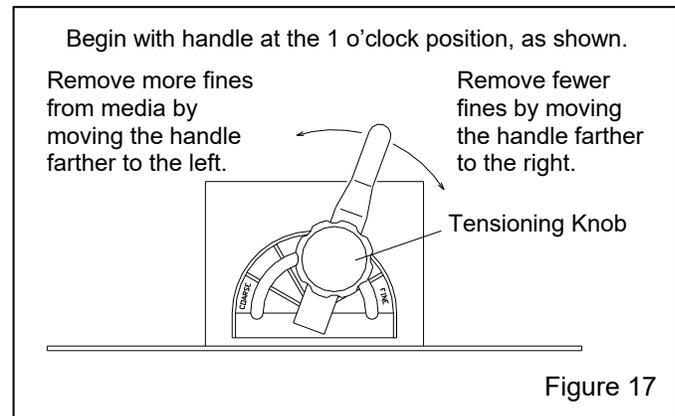

**5.5.4** When using media finer than 180-mesh, the inlet baffle of the reclaimer may need to be removed. Refer to Section 1.9.6.

## 5.6 Cabinet Air-Inlet Damper

**5.6.1** Once the inlet is initially set, per Section 2.6, it seldom requires readjustment. The initial setting produces approximately .5" to .75" of static pressure in the cabinet enclosure. **Do not confuse cabinet static pressure with reclaimer static pressure, which is controlled by the dust-collector damper, as noted in Section 5.4. Reclaimer pressure must be set before cabinet pressure.**

**5.6.2** Using a manometer (as noted in Section 5.8 and listed in Section 9.1) is the most accurate method of monitoring and adjusting cabinet pressure. Following the instructions packed with the manometer, start the exhauster, insert the needle into a glove, and adjust pressure using the cabinet's air-inlet damper. Open the damper farther to decrease static pressure or close it farther to increase pressure.

**5.6.3** If a manometer is not available, use the gloves as an indicator. With the exhauster ON, the gloves should be inflated but not elevated off the grate.


## 5.7 Door Interlocks – Figure 18

### **⚠ WARNING**

**Never attempt to override the interlock system. Doing so can result in serious injury from unexpected blasting.**

**5.7.1** The door interlocks disable the blasting control circuit when the doors are open. To enable blasting, the door-interlock switches must be engaged when the doors are closed. The interlocks are set at the factory and do not normally require field adjustment unless parts are replaced. When adjustment is required, proceed as follows.

**5.7.2** Close cabinet doors.

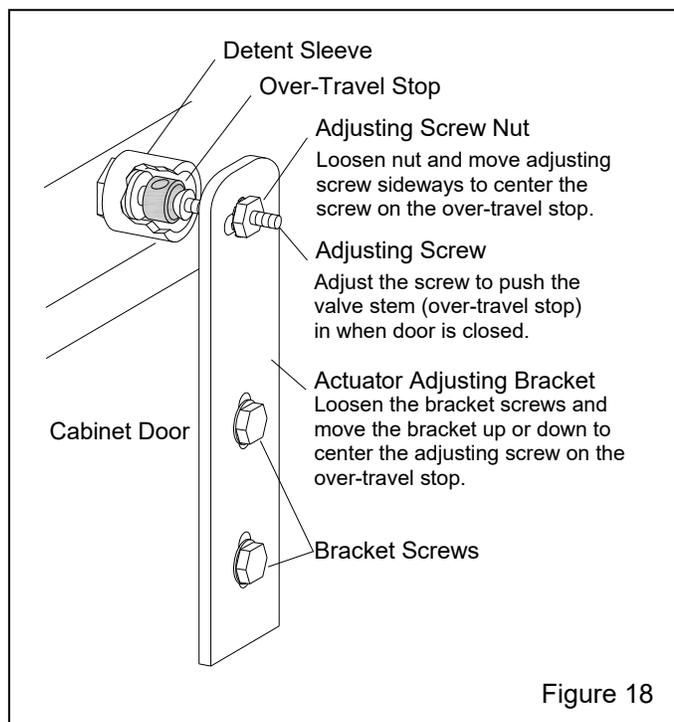

**5.7.3** Loosen the actuator bracket screws and adjusting screw nut. Move the actuator bracket up or down, and the adjusting screw sideways, to center the adjusting screw on the over-travel stop. Tighten the bracket screws.

**5.7.4** Turn the adjusting screw in or out as required to engage the switch without applying excessive pressure on it. Tighten the adjusting screw nuts.

**5.7.5** Test the operation with the doors open and then closed. Negative pressure inside the cabinet may cause the doors to flex inward. Tests should be performed with the exhauster running. Point the nozzle away from the door during the tests and open the door only enough to disengage the interlock switch. The interlocks should stop the blasting when either door is opened and permit blasting when the doors are closed.

## 5.8 Optional Manometer

These instructions show several methods of taking static-pressure readings (negative pressure) on reclaimers by using a flexible-tube manometer. Use the method best suited for the application. The instructions explain the processes for taking periodic readings and show how to permanently install the manometer for taking frequent readings. A fitting should be installed when the manometer installation is permanent, per Paragraph 5.8.6.3. Use silicone or other sealant around the fitting to prevent leaks. The fitting should be capable of being capped when the manometer tube is removed. A cap will prevent leaks that alter the reclaimer's separation efficiency. Taking readings at different locations could produce different readings. Static-pressure readings at the door are generally 0.5" to 1" lower than readings taken above the reclaimer. The readings are reference points, so readings should be taken using the same method each time a reading is taken.

**5.8.1** Refer to instructions packed with the manometer for preparing and operating the manometer.

**5.8.2** Connect one end of the 3/16" ID tubing to one of the tubing connectors (elbows) at the top of the manometer by pushing it over the barbed adaptor.

**5.8.3** Leave the needle protector on the needle and insert the needle into the other end of the tubing. The ends of the tubing must fit tight on the manometer and needle; leaks will cause inaccurate readings.


**5.8.4** Open both manometer valves (elbows), per manometer instructions.

**5.8.5** Magnets on the manometer hold it in position on the reclaimer or dust-collector body. The manometer must be vertical so the fluid is level on both sides.

**5.8.6 Needle placement:** Figure 19 shows the manometer setup for taking both periodic and frequent static-pressure readings.

**5.8.6.1 Taking readings in the flex hose:** Remove the needle protector and insert the needle into the flex hose, approximately 8" above the top of the reclaimer.


**5.8.6.2 Taking readings at the reclaimer door:** Open the reclaimer fill door, remove the needle protector, and place the needle so the tip is inside the door opening. Carefully close the door on the needle. The side of the needle will embed into the rubber, creating an airtight seal.

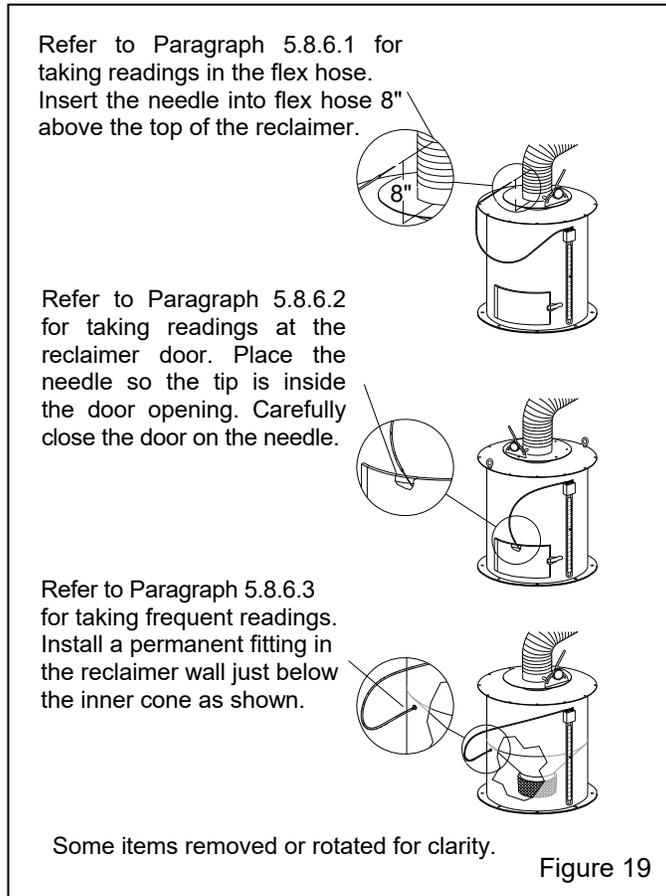

**5.8.6.3 Taking frequent readings using a permanent fitting:** A permanent fitting may be installed in the reclaimer wall, as shown in Figure 19, for taking frequent static-pressure readings. Permanent fittings must have a barb to accommodate the 3/16" ID tubing and have a means of sealing the fitting when the manometer is not in use. Use silicone sealer or other sealant to seal around the fitting to prevent leaks. The fitting should be capable of being capped when the manometer tube is removed. Sealing the fitting will prevent leaks that alter the reclaimer's separation efficiency. Air drawn into the reclaimer will cause carry over of good media to the dust collector.

**5.8.7** Adjust the slide rule to align the zero with the fluid level. Refer to the upper part of Figure 20.

**5.8.8** Open cabinet doors and turn the exhauster ON. The negative (static) pressure will move fluid in the tube. **NOTE: Readings must be taken with the cabinet doors open and with the exhauster running.**

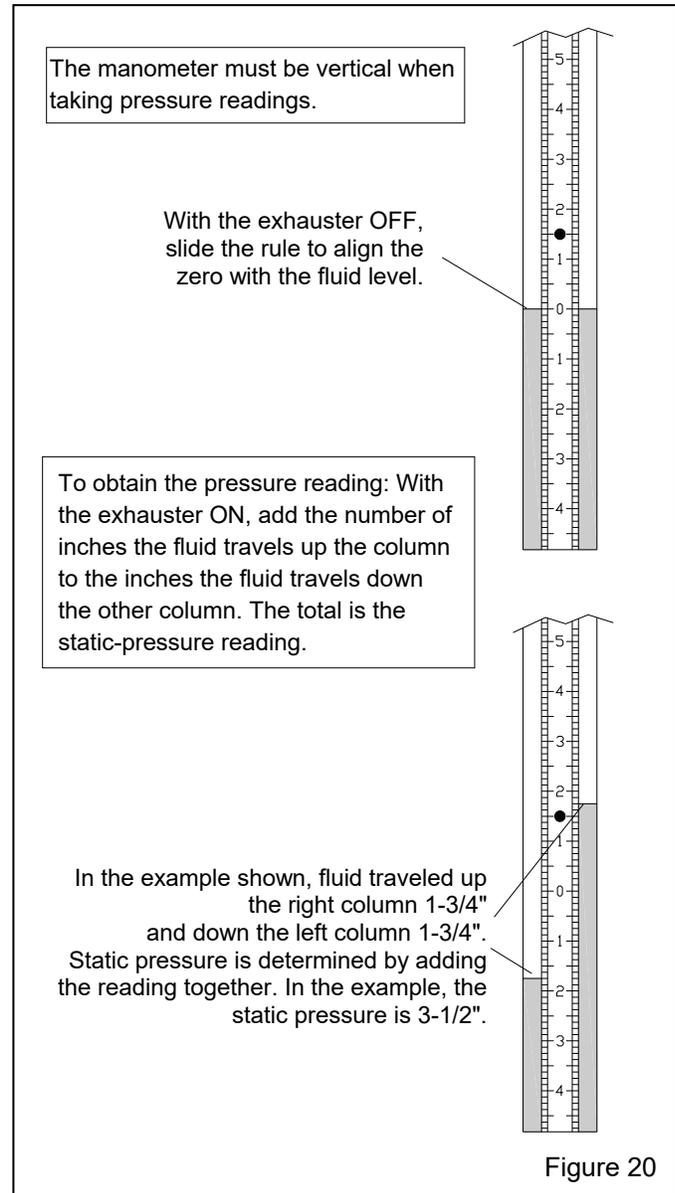

**5.8.9** To find the static pressure, add the number of inches the fluid travels up one column to the inches the fluid travels down the other column. Refer to the example in Figure 20.

**5.8.10** After taking the readings, replace the needle protector. Close the manometer valves and store the manometer in the original container in a clean area. **NOTE:** If the manometer installation is permanent, the manometer may remain on the reclaimer body after the valves are closed.

## 6.0 PREVENTIVE MAINTENANCE

To avoid unscheduled downtime, establish an inspection schedule. Inspect all parts subjected to media contact, including the gun and nozzle, media hose, flex hose, wear plate, and all items covered in this section. Adjust frequency of inspections as needed, based on:

- **Usage:** Frequently used cabinets require more maintenance and inspections than those occasionally used.
- **Type of media:** Aggressive media wears parts faster than not aggressive media.
- **Condition of parts being blasted:** Heavily contaminated parts require more maintenance to the cabinet's media recovery system.
- **Friability of media:** Media that rapidly breaks down require more maintenance to the cabinet's media recovery system and dust collector.

### 6.1 Daily Inspection and Maintenance Before Blasting with the Air OFF

**6.1.1 Check media level:** Check media level in reclaimer and refill as necessary.

**6.1.2 Inspect reclaimer debris screen and door gasket:** Check reclaimer debris screen for debris. The screen is accessible through the reclaimer door. With the exhauster OFF, remove the screen and empty it daily or when loading media. Empty the screen more often if part blasted causes excessive debris. Do not operate the machine without the screen in place; oversized byproduct from blasting could plug the nozzle. While the door is open, inspect the door gasket for wear or damage. Replace the gasket at the first sign of wear.

**6.1.3 Drain compressed-air filter:** The cabinet is equipped with a manual-drain air filter. Drain the filter at least once a day and more often if water is present. Moist air inhibits the flow of media. Drain the air line and receiver tank regularly. If the filter does not remove enough moisture to keep media dry and flowing, it may be necessary to install an air dryer or aftercooler in the compressed-air-supply line.

**6.1.4 Inspect dust container:** Refer to the dust-collector owner's manual and empty dust containers. Adjust schedule based on refill rate.

### 6.2 Daily Inspection During Blasting – Have Someone do the Following:

**6.2.1 Inspect cabinet for dust leaks:** During operation, inspect cabinet door seals for media leaks. Dust leaking from the inlet damper or other places on the cabinet indicates saturated filter cartridge. Refer to the dust-collector owner's manual.

**6.2.2 Check exhaust air for dust:** Dust discharge at the dust-collector outlet indicates a leaking or damaged filter cartridge. Check immediately. Note that a small amount of dust egress is normal for a short time when the cartridge is new before it is seasoned.

**6.2.3 Drain pulse reservoir:** Refer to the dust-collector owner's manual and drain the pulse reservoir (manifold) at the end of each shift.

**6.2.4 Cartridge pulsing:** Refer to the CDC-1 Dust-Collector manual for pulsing instructions and pulse the cartridge at least every half hour of blasting and before turning OFF the exhauster. Dusty blasting conditions will require more frequent pulsing. RPC-2 and RPH-2 Dust Collectors are automatically pulsed at timed intervals.

### 6.3 Weekly Inspection and Maintenance Before Blasting with Air OFF

**6.3.1 Inspect view-window cover lens:** Inspect the window cover lens and replace as needed, per Section 7.3.

**6.3.2 Inspect gloves:** Inspect gloves for wear. The first sign of deterioration may be excessive static shocks. Replace as needed, per Section 7.1.

**6.3.3 Inspect BNP® gun Assembly:** Inspect internal parts of the BNP gun for wear. Inspection and replacement of the air jet cover before it wears through will prolong the life of the jet. Replace parts as needed, per Section 7.2.

**6.3.4 Inspect media hose:** Inspect media hose for thin spots by pinching it every 6 to 12 inches. Replace the hose when it becomes soft.

### 6.4 Weekly Inspection During Blasting – Have Someone do the Following:

**6.4.1 Inspect flex hoses:** Inspect flex hoses for leaks and wear.

## 6.5 Monthly

**6.5.1 Reclaimer wear plate and liners:** Remove the flex hose from the reclaimer inlet and use a light to inspect the reclaimer wear plate or optional rubber reclaimer liners for wear. If the rubber is worn through to the backing metal, replace wear plate per Section 7.8 or rubber liners per Section 7.9, as necessary.

## 6.6 Dust Collector

Reverse-pulse dust collectors are covered in a separate manual. Refer to Section 1.1.1.

## 7.0 SERVICE MAINTENANCE

### **⚠ WARNING**

**Prior to doing any maintenance or opening the dust collector, the employer must meet required OSHA standards including but not limited to 29CFR 1910 for**

- **Appropriate Respirator**
- **Protective Clothing**
- **Toxic and Hazardous Substances**
- **Fall Protection**
- **Lockout and Tagout Procedure**

**All dust is hazardous to breath; toxicity and health risk vary with type of dust generated by blasting. Prolonged exposure to any dust can result in serious lung disease and death. Short-term exposure to toxic materials, such as lead dust or dust from other heavy metals and corrosives, can cause serious injury or death. Identify all material that is being removed by blasting and obtain a safety data sheet (SDS) for the blast media. Waste dust in the collector can cause serious injury or death through inhalation, absorption, or ingestion. The employer shall meet all OSHA requirements, including but not limited to those for confined space, combustible dust, fall protection, hazard communication, and lockout and tagout procedure for electrical and pneumatic supply.**


## 7.1 Gloves

**7.1.1** Special static-dissipating gloves are provided for operator comfort. It will be necessary to change gloves periodically as they wear. The first sign of deterioration may be excessive static shocks.

**7.1.2 Band-clamp type:** Band-clamp type gloves are held in place by metal band clamps on the inside of the cabinet. To replace, loosen the clamps with a screwdriver, replace the gloves, and tighten the clamps.

**7.1.3 Quick-change type, clampless installation:** Quick-change gloves are held in place using spring rings sewn into the attachment end of the glove. To install, insert the glove into the arm port so one spring is on the inside of the port and the other is on the outside, sandwiching the arm port between both spring rings.

## 7.2 BNP® Gun Assembly – Figure 21

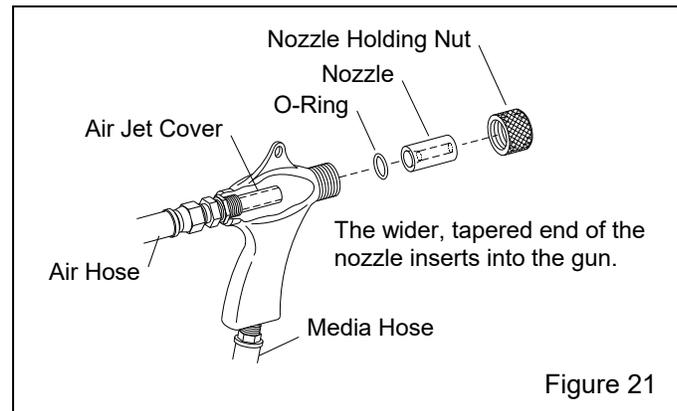

**7.2.1** Replace the nozzle when its orifice diameter has worn 1/16" larger than its original size or when suction diminishes noticeably. To change the nozzle, unscrew the holding nut from the gun end and pull the nozzle from the gun. Inspect the nozzle O-ring and replace if worn or damaged. Inspect the air jet cover; replacing it before it wears through will prolong the life of the jet. Insert a new O-ring and nozzle, placing the tapered end toward the jet. Screw the holding nut onto the gun.

## 7.3 View-Window Cover Lens

**7.3.1** Rapid frosting of the view window can be avoided by directing ricocheting media away from the window and by installing a cover lens on the inside surface of the window. Using cover lenses prolongs the life of the view window.

**7.3.2** The best way to install a cover lens is to remove the window from the cabinet. If, for some reason, it is not practical to remove the window, the lens may be applied with the window glass in place.

**7.3.3** To install a cover lens, carefully remove the adhesive backing making sure the adhesive remains on the lens and apply the lens to the clean, dry, inner surface of the view window. When the cover lens becomes pitted or frosted, replace it.

## 7.4 View-Window Replacement

### **⚠ WARNING**

**Do not use plate glass for replacement view windows. Plate glass shatters on impact and can cause severe injury. Use only genuine ZERO® laminated replacement glass.**

**7.4.1** Remove the two window-frame nuts located on the upper edge of the window frame and swing the window frame open. If the frame is to remain open, for cleaning or other reasons, remove it, per Section 7.6.

**7.4.2** Remove the old window.

**7.4.3** Inspect the window-frame gaskets on both the window frame and on the cabinet. If either gasket is damaged, replace it, per Section 7.5.

**7.4.4** Install a view-window cover lens, per Section 7.3.

**7.4.5** Set the new window (cover lens down) squarely over the window opening, making sure that all edges of the window are centered and overlapping the window gasket, and that the window is resting on the lower support tabs.

**7.4.6** Swing the window frame into place and tighten the frame nuts.

## 7.5 Window-Gasket Replacement – Figure 22

**7.5.1** Inspect the gaskets when changing the view window. Replace the window-frame gasket and cabinet-window opening gasket at the first sign of media leakage around the view window, or if gaskets are worn or otherwise damaged.

**7.5.2** Remove the window and window frame, per Section 7.6.

**7.5.3** Remove all the old gasket material and clean the surfaces of the cabinet and window frame.

**7.5.4** Peel a short section of adhesive backing from the 5/16"-thick strip gasket and adhere the gasket to the center of the top edge of the window opening, as shown in Figure 22. Peel additional backing as needed and work the strip around the radius of each corner, pressing it firmly to bond. Trim the gasket to fit and compress the ends to seal.

**7.5.5** Using 5/32"-thick strip gasket, repeat the process on the underside of the window frame.

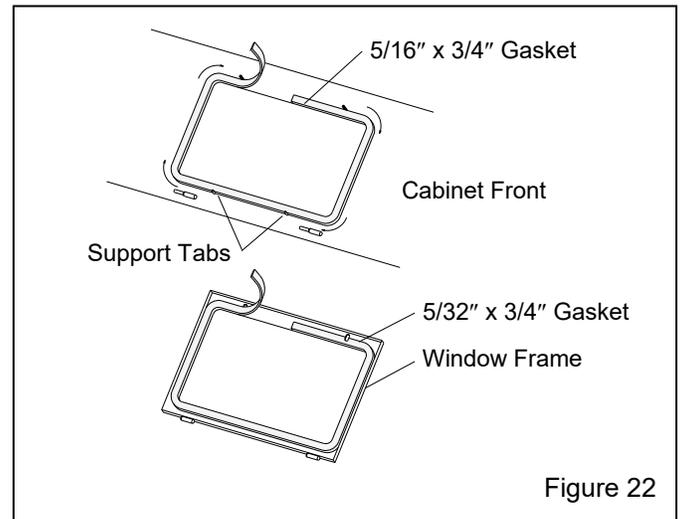


Figure 22

**7.5.6** Trim around the window-frame bolt slots as needed.

## 7.6 Window-Frame Removal – Figure 23

**7.6.1** Remove the two window-frame nuts located on the upper edge of the window frame and swing the window frame open.

**7.6.2** Remove the window to prevent breakage.

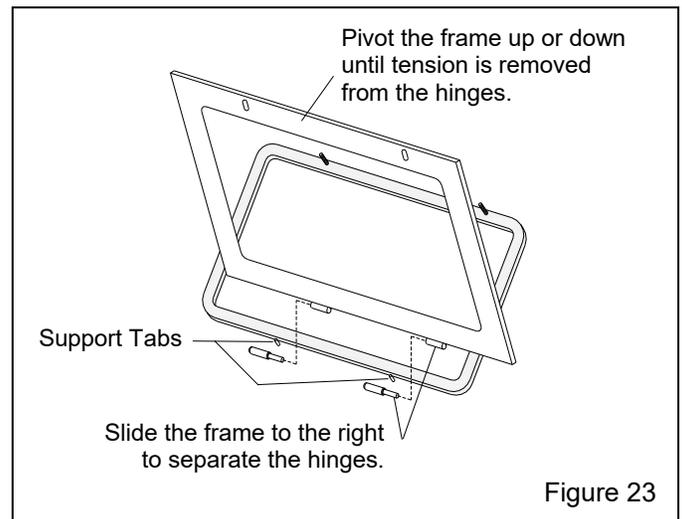


Figure 23

**7.6.3** Pivot the window frame up or down until tension is off the frame hinges.

**7.6.4** To remove, slide the frame to the right. The hinges separate, as shown in Figure 23.

**7.6.5** Replace the frame in reverse order. Align the top bolt holes with the bolts; slide the frame as necessary.

**7.6.6** Set the window squarely over the window opening, making sure that all edges of the window are centered and overlapping the window gasket, and that the window is resting on the window support tabs.

**7.6.7** Swing the window frame into place and tighten the frame nuts.

## 7.7 LED Light Assembly


### **CAUTION**

**Use an approved stepladder when servicing the light assembly. Do not climb on top of the cabinet. The cabinet top will not support the weight of a person. Failure can result in injury and property damage.**

#### 7.7.1 Remove light-mount cover

**7.7.1.1** Turn OFF electrical power.

**7.7.1.2** Remove the four nuts and washers that attach the light-mount cover to the cabinet and remove the cover, as shown in Figure 24.

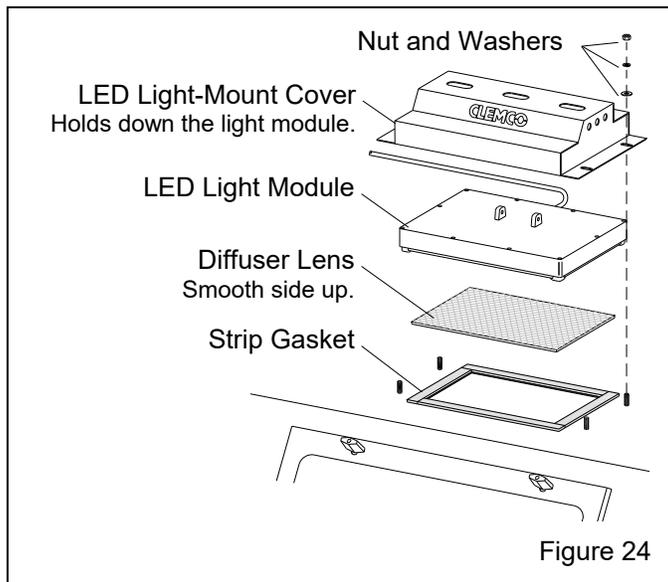

#### 7.7.2 Gasket replacement

**7.7.2.1** Remove the four nuts and washers that attach the light-mount cover to the cabinet and remove the cover, as noted in Section 7.7.1. Move the light module off the diffuser lens and remove the lens.

**7.7.2.2** Remove all the old gasket material and clean the surface of the cabinet.

**7.7.2.3** Lay a section of strip gasket along the edge of the opening and cut to length, allowing 3/4" overlap on each end. Peel a short section of adhesive backing and adhere the strip gasket to the top edge of the light opening, as shown in Figure 24. Press the gasket to bond. Repeat the process for each side, compressing the ends to seal.

#### 7.7.3 Diffuser lens replacement

**7.7.3.1** Remove the four nuts and washers that attach the light-mount cover to the cabinet and remove the cover, as noted in Section 7.7.1. Move the light module off the diffuser lens and remove the lens. Inspect the gasket and replace it, per Section 7.7.2, if it is compressed or otherwise damaged, before centering the new diffuser (smooth side up) over the gasket.

**7.7.3.2** Set the light module on the diffuser and reattach the cover.

#### 7.7.4 LED light module replacement

**7.7.4.1** Turn OFF electrical power and perform lockout and tagout procedure to power supply.

**7.7.4.2** Remove the light-mount cover, per Section 7.7.1.

**7.7.4.3** Remove the junction-box cover and note the wire connections. Current connections are as follows:

- Brown wire ..... Hot
- Blue wire ..... Neutral
- Yellow w/green stripe ..... Ground

If color coding is different from that shown above, make note of the color code before disconnecting the wires.

**7.7.4.4** Loosen the strain-relief compression nut and remove the cord from the junction box.

**7.7.4.5** Place the new module in position on the cabinet and route the cord through the strain relief and into the junction box.

**7.7.4.6** Cut the cord to length and wire as follows:

- Brown wire ..... Hot
- Blue wire ..... Neutral
- Yellow w/green stripe ..... Ground

**7.7.4.7** Apply power to test the light(s).

**7.7.4.8** Tighten the strain-relief compression nut, set the light module on the diffuser, and reattach the cover.

## 7.8 Replacing Reclaimer Wear Plate

### **⚠ WARNING**

To access wear-plate mounting screws the reclaimer may need to be removed from the cabinet. BNP reclaimers weigh between 100 lbs and 150 lbs, depending on the size. When removing and installing the reclaimer, it must be adequately supported and secured to appropriate lift equipment. Failure to secure and use proper lift device can result in injury.

### 7.8.1 Reclaimer with welded-on, nonremovable top – Figure 25

Refer to Section 7.8.2 to replace the wear plate in reclaimer with bolt-on, removable top.

#### 7.8.1.1 Remove the flex hose from the reclaimer inlet.

**7.8.1.2** If it is necessary to remove the reclaimer to access the wear-plate mounting screw, remove the media hose or metering valve, whichever is easier, then remove the reclaimer mounting bolts and remove the reclaimer.

**7.8.1.3** Remove the reclaimer inlet adaptor, adaptor gasket, and old wear plate. The wear plate is held in place by screws attached from the outside of the reclaimer. Remove the screws and pull out the wear plate through the reclaimer inlet.

**7.8.1.4** Remove remnants of old caulk that will prevent the new wear plate from seating against the reclaimer wall and top.


**7.8.1.5** Angle the new wear plate into the reclaimer inlet and position it so the straight end is flush with the inlet. Use locking pliers, clamps, or other means to hold the wear plate in position, making sure the leading edge of the wear plate is aligned with the reclaimer inlet, as shown in Figure 25, and that the top edge is even with the top of the reclaimer.

**7.8.1.6** Install the front-two sheet-metal screws through the old screw holes to secure.

**7.8.1.7** Use a board or similar object as leverage to pry the wear plate against the inner wall of the reclaimer.

**7.8.1.8** New self-drilling sheet-metal screws are provided with the wear plate. While forcing the wear plate against the reclaimer wall, install the screws through the remaining screw holes to secure. Rearrange

the pry board as needed to press the wear plate against the reclaimer wall when installing screws.

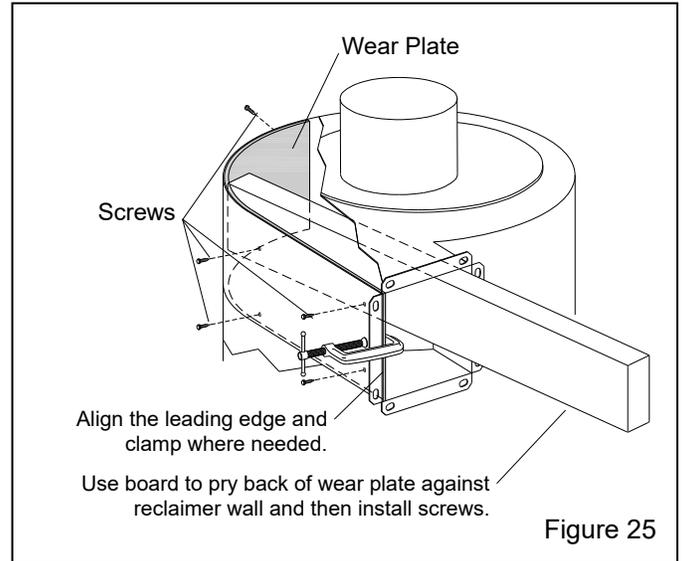

**7.8.1.9** To avoid rapid wear, apply RTV caulk to fill gaps at the seams on the top and bottom of the wear plate

**7.8.1.10** Attach the inlet adaptor pipe, replacing the gasket if worn, compressed, or otherwise damaged.

**7.8.1.11** Reattach the reclaimer and connect the flex hose and media hose.

**7.8.1.12** Allow time for the caulking to cure before putting the reclaimer into service.

### 7.8.2 Reclaimer with bolt-on, removable top 600 cfm only – Figure 26

Refer to Section 7.8.1 to replace the wear plate in reclaimer with welded-on, nonremovable top.

#### Installation Notes:

Make sure enough 13089 - 2" adhesive-backed gasket is available to replace compressed or damaged gaskets on the reclaimer upper flange (and lower flange if the hopper is removed).

- 600 cfm requires 6 feet for each flange.

**7.8.2.1** Remove the flex hose from the reclaimer inlet.

**7.8.2.2** If it is necessary to remove the reclaimer to access the wear-plate mounting screw, remove the media hose or metering valve, whichever is easier, then remove the reclaimer mounting bolts and remove the reclaimer.


## ⚠ WARNING

**BNP 600 cfm reclaimer weigh about 100 lbs. When installing or removing the reclaimer, it must be adequately supported and secured to appropriate lift equipment. Failure to secure and use proper lift device can result in injury or death. When using a ladder to service the reclaimer, make sure it is approved for the application and that appropriate fall protection is used. Failure to use appropriate ladder and fall protection can result in injury.**

**7.8.2.3** Unbolt the reclaimer top and remove the top, the inlet adaptor, adaptor gasket, and old wear plate. The wear plate is held in place by screws attached from the outside of the reclaimer. Remove the screws and pull out the wear plate.

**7.8.2.4** Remove remnants of old caulk that will prevent the new wear plate from seating against the reclaimer wall or top.

**7.8.2.5** Angle the new wear plate into the reclaimer inlet and position it so the straight end is flush with the inlet. Use locking pliers, clamps, or other means where needed to pry the wear plate against the side of the inlet and inner wall. Make sure the leading edge of the wear plate is aligned with the reclaimer inlet and that the top edge is even with the top of the reclaimer.

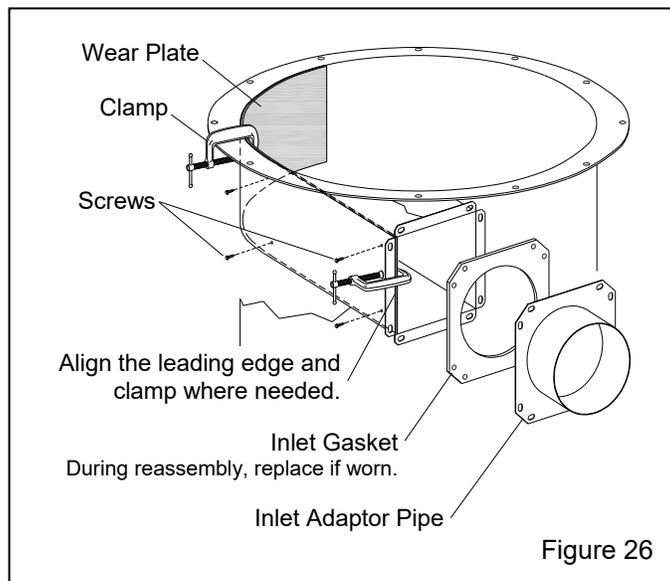

**7.8.2.6** New self-drilling sheet-metal screws are provided with the wear plate; match drill through each old screw hole into the wear plate to secure. Rearrange the clamp(s) as needed to press the wear plate against

the reclaimer wall when installing. NOTE: The wear plate can also be installed by prying it against the wall as explained in Section 7.8.1.

**7.8.2.7** Replace the upper flange gasket as needed and reattach the reclaimer top.

**7.8.2.8** To avoid rapid wear, apply RTV caulk to fill gaps at the seams on the top and bottom of the wear plate.

**7.8.2.9** Reattach the reclaimer and connect the flex hose and media hose.

**7.8.2.10** Attach the inlet adaptor pipe, replacing the gasket if worn, compressed, or otherwise damaged.

**7.8.2.11** Allow time for the caulking to cure before putting the reclaimer into service.

## 7.9 Replacing or Field Installing Optional Rubber Reclaimer Liners – Figure 27

**Not available for 300 cfm reclaimers.**

The reclaimer must be designed to accept liners and have a removable top, as shown in Figure 27. **NOTE: The following instructions are to replace existing liners or field installing new liners into modular-style 600 cfm reclaimers only. Modular reclaimers have an upper and lower flange and have a removable top and bottom hopper. 600 cfm modular reclaimers are provided on or after 09/2018 and are mounted to the back of the cabinet using two angle brackets, as shown in Figure 42, Item 17.**

### Installation Notes:

Make sure enough 13089 - 2" adhesive-backed gasket is available to replace the compressed or damaged gasket on the reclaimer lower flange.

- 600 cfm requires 6 ft

The inner cone and cone ring are glued in place. Make sure a multi-purpose contact adhesive, such as 3M® No. 10 neoprene contact adhesive or equal is available.

It is easier to install or replace liners if the bottom hopper is removed from the reclaimer. Removing the hopper provides a flat surface for the reclaimer to sit.

**7.9.1** Remove the flex hoses from the reclaimer inlet and outlet.

**7.9.2** Remove the hopper from the bottom of the reclaimer. First remove the rear, hard to reach bolts; making it easier to support the hopper while removing the easily accessible bolts. Set the hopper aside.

---

## ⚠ WARNING

---

**To access liner-mounting screws the reclaimer must be removed from the cabinet. 600 cfm reclaimers weigh about 100 lbs. When removing and installing the reclaimer it must be adequately supported and secured to appropriate lift equipment. Failure to secure and use proper lift device can result in injury.**

---

**7.9.3** Remove the reclaimer mounting bolts and remove the reclaimer from the cabinet.

**7.9.4** Remove the reclaimer inlet-pipe adaptor.

**7.9.5** Set the reclaimer top-side-up on a clean, flat, and level surface.

**7.9.6** Remove the bolts and nuts, securing the reclaimer top and then remove the top (and top liner if the reclaimer is currently lined).

**7.9.7** If the reclaimer is currently unlined, begin at the installation note preceding Paragraph 7.9.14.

**7.9.8** Remove the top liner and cylinder liner: Grind the tack welds from the bottom of the cylinder liner that secure the liner to the tube, then slide the cylinder liner and top liner off the inner tube.

**7.9.9** Remove the nuts and washers located along the right side of the inlet and remove the inlet baffle through the top of the reclaimer.

**7.9.10** Remove the screws holding the inlet-side liner and inlet-top liner and remove both liners from the reclaimer inlet.

**7.9.11** The wall liner is held in place with self-drill screws; from the outside of the reclaimer, remove the screws and lift the wall liner from the top of the reclaimer.

**7.9.12** Inner cone liners and cone-ring liners are glued onto the inner cone. Pull off the liners to remove them.

**7.9.13** Remove all old caulking and adhesive from the weldment.

**Installation Note:** The numbers in parentheses (-) shown in Figure 27 and on the following applicable paragraphs show the recommended order of installation. When installing the liners, make sure that seams are aligned. The final assembly must be smooth and free of protrusions, edges, and gaps. Any edges will disrupt the air flow, causing wear and affecting the reclaimer's media cleaning efficiency.

**7.9.14** (1st) Place the cone ring liner on the inside of the cone-ring; check fit and trim if needed. Refer to the instructions provided with the adhesive; some adhesives require it to be applied to both contact surfaces. Apply a multi-purpose contact adhesive, such as 3M® No. 10 neoprene contact adhesive or equal, to the fabric side of the liner and install the liner. Smooth out the liner to eliminate air pockets.

**7.9.15** (2nd) Place the cone liner in the cone with the fabric side down, check the fit and trim if necessary. Apply contact adhesive to the fabric side of the liner and install the cone liner. Smooth out the liner to eliminate air pockets.

**7.9.16** (3rd) Place the inlet-side liner (rubber side out) against the side of the inlet housing; center the side liner and align the front edge of the liner with the front of the housing. Temporarily clamp the side liner in place.

**7.9.17** (4th) Align the wall-liner cutout with the reclaimer inlet housing and lower the liner into the reclaimer. Temporarily insert the baffle bolts through the liner and reclaimer holes to position that side of the wall liner. Clamp the wall liner in place, making adjustments to make sure it is flush with the top of the reclaimer body and that the inlet-side liner is aligned with the side-liner cutout. Reposition the inlet-side liner as needed.

While pushing or clamping the liner against the weldment, secure the wall liner with self-drilling screws at each existing hole location. **NOTE: To field install a new, first-time wall liner, use self-drilling screws to secure it at the seam and an inch or two from the top and bottom at each quadrant.**

**7.9.18** (5th) Remove the temporary baffle bolts and install the inlet baffle by inserting bolts and flat washers from the inside of the reclaimer and then attach lock washers and nuts from the outside, leaving the baffle slightly loose.

**7.9.19** Apply silicone caulking on seams between the cone ring and cone liner, to the seams on the cone ring and cone, between the cone liner and wall liner, and the seam on the wall liner. Wipe caulking to even with the liners. Voids will cause premature wear.

---

## NOTICE

---


**All seams between each liner must be sealed, and all seams between the liners and reclaimer weldment must be sealed. Voids will cause premature wear.**

---

**7.9.20** (6th) Use self-drilling screws through the existing holes to secure the side-inlet liner to the side of the inlet housing. NOTE: To field install new, first-time inlet-side liners, use self-drilling screws at each liner corner to secure. Remove the clamps after the liner is secured.

**7.9.21** (7th) Align the front edge of the inlet-top liner to the front of the inlet housing and use self-drilling screws through the existing holes to secure. NOTE: To field install new, first-time inlet-top liners, after clamping the liners, use self-drilling screws at each liner corner to secure. Remove the clamps after the liner is secured.

**7.9.22** (8th) Slide the top liner onto the inner tube and align the holes in the liner with those in the top. Note that the holes around the inlet are spaced differently from the others. Temporarily install a couple of bolts to keep it in alignment.

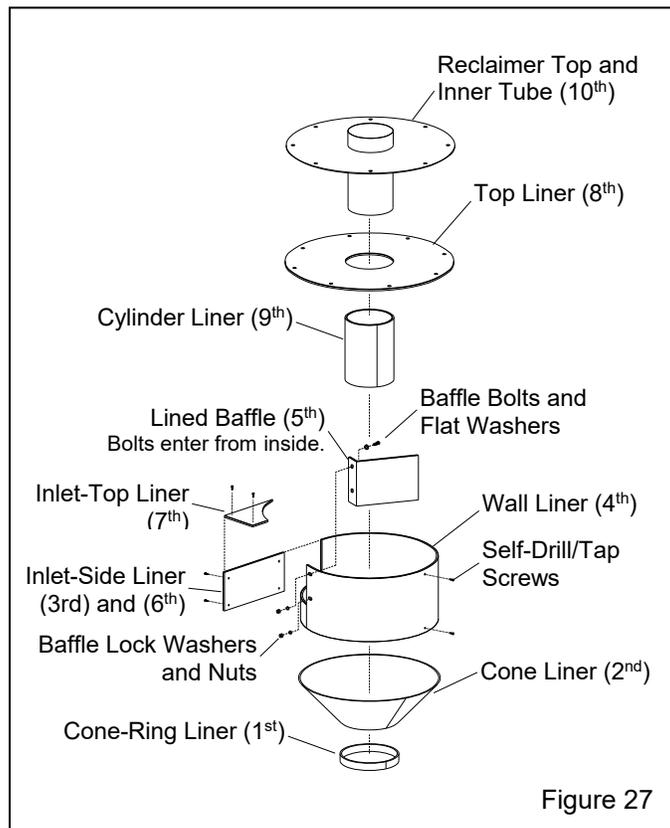

**7.9.23** (9th) Place the cylinder liner over the inner tube. Make sure the liner is tight against the top liner and use worm clamps to temporarily clamp the liner to the tube. Tack weld the bottom of the cylinder liner to the inner tube in three or four places. Remove the clamps when the cylinder liner is secured.

**7.9.24** Apply caulking to the seam on the cylinder liner and between the cylinder liner and top liner.

**7.9.25** Apply caulking around the top edge of the wall liner and top-inner edge on the inlet housing.

**7.9.26** (10th) Align the reclaimer top assembly over the top of the reclaimer and lower it into place to match the mating holes in the flange, being careful not to smear the caulking. Secure the top bolts and inlet baffle bolts.

**7.9.27** Working through the reclaimer inlet, wipe the caulking seal smooth. Re-caulk any voids.

**7.9.28** Working through the reclaimer inlet, apply silicone caulking to seal seams around the inlet-side liner, inlet-top liner, and reclaimer weldment. Wipe the caulking smooth.

**7.9.29** Attach the inlet-pipe adaptor, replacing the gasket if worn, compressed, or otherwise damaged.

**7.9.30** Reattach the reclaimer to the cabinet.

**7.9.31** If the lower flange gasket (usually installed on the hopper flange) is worn, compressed, or otherwise damaged, clean old gasket material from the flange and install new 2" strip gasket and attach the hopper.

**7.9.32** Install flex hoses.

**7.9.33** Allow time for the caulking to cure before putting the reclaimer in service

## 7.10 Replacing or Removing Reclaimer Inlet Baffle – Figure 28

600 cfm reclaimers only with bolt-on tops.

When using lightweight media such as agricultural media or very fine media (180 and finer), as noted in Paragraph 1.9.6, good media may be carried over to the dust collector. To prevent lightweight-media carry over, the inlet baffle of the reclaimer can be removed. Review the following process before beginning to make sure all parts are available:

### Installation Notes:

Make sure enough 13089 - 2" adhesive-backed gasket is available to replace compressed or damaged gaskets on the reclaimer upper flange (and lower hopper flange if the hopper is removed from the reclaimer).

- 300 cfm none required. Baffle is not removable.
- 600 cfm requires 6 ft for each flange.


Depending on conditions such as height and accessibility, it may be easier to replace the baffle if the reclaimers is removed from the cabinet.

**7.10.1** Remove the flex hose from the reclaimers top.

**7.10.2** Remove the fasteners securing the reclaimers top and remove the top.

**7.10.3** Remove the two bolts that secure the baffle to the right side of the reclaimers inlet and remove the baffle through the top.

**7.10.4** Remove all caulking residue.

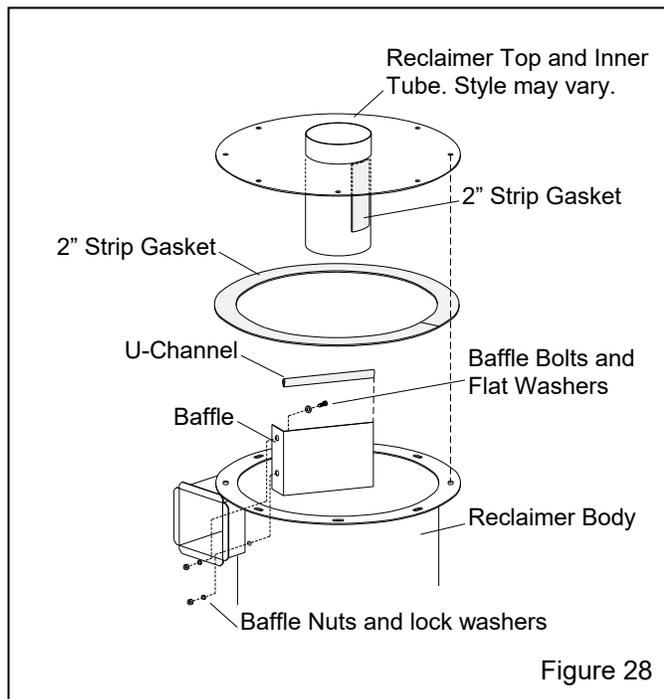

**7.10.5** If removing (not replacing) the baffle, remove the strip gasket from the inner tube, install the baffle bolts and reclaimers top. If replacing the baffle, skip to Paragraph 7.10.6.

**7.10.6** When replacing the baffle, make sure the strip gasket on the inner tube is in good condition and install the new baffle in reverse order. Apply silicone caulk to the seam (opposite side of the mounting bolts) between the baffle and reclaimers body. Wipe the caulk smooth.

**7.10.7** Inspect the strip gasket on the reclaimers upper flange; replace it if damaged or compressed.

**7.19.8** Install the reclaimers top and allow the caulking to dry before putting the reclaimers into service.

## 7.11 Reverse-Pulse Dust Collector

Refer to the applicable dust-collector manual (as noted on Page 1, Paragraph 1.1.1) for dust-collector maintenance.

## 8.0 TROUBLESHOOTING

### **⚠ WARNING**

To avoid serious injury, observe the following when troubleshooting:

- Turn OFF the compressed-air supply, Bleed the supply line, lockout and tagout the air supply.
- When air is required to check the controls, always enlist the aid of another person to:
  - Hold the blast gun securely.
  - Operate the foot pedal.
- Never bypass the foot pedal or wedge it in the operating position.
- Never override the door interlock system.
- Follow all OSHA Regulations including lockout and tagout procedures.

### 8.1 Poor visibility

**8.1.1** Dirty filter cartridge(s). Pulse cartridge and empty dust container regularly. When using an RPC-2 refer to the applicable dust-collector manual noted in Paragraph 1.1.1, to adjust pulse pressure and pulse sequence.

**8.1.2** Exhauster motor not operating. Check voltage to motor and motor wiring.

**8.1.3** Check rotation of exhauster motor; the motor should rotate as indicated by the arrow on the housing. If it does not rotate in the proper direction, **lockout and tagout power** and switch the motor leads, as shown on the motor plate. Refer to Section 2.5.

**8.1.4** Using friable media that rapidly breaks down or using media that is too fine or worn out. Check condition of media

**8.1.5** Dust-collector damper closed too far, restricting air movement in cabinet. Adjust static pressure, per Section 5.4.

**8.1.6** Cabinet air-inlet damper closed too far, restricting air movement through the cabinet. Adjust damper, per Section 2.6 and 5.6.

**8.1.7** Reclaimer door open. Check door.

**8.1.8** Hole worn in flex hose between cabinet hopper and reclaimer inlet or between the reclaimer and dust collector. Replace hose and route it with as few bends as possible to prevent wear.

**8.1.9** Obstruction in flex hose between the cabinet hopper and reclaimer inlet. Inspect flex hose for blockage

## **8.2 Abnormally high media consumption**

**8.2.1** Door on reclaimer open or worn door gasket. Air entering the reclaimer around the door will cause media carry over to the dust collector. Inspect door gasket. DO NOT operate unless all doors are closed.

**8.2.2** Dust-collector damper open too far. Adjust static pressure, per Section 5.4.

**8.2.3** Media may be too fine or worn-out. Check condition of media.

**8.2.4** Using friable media that rapidly breaks down. Check condition of media.

**8.2.5** Blast pressure too high for the media, causing media to breakdown. Check blast pressure and adjust as needed or switch media.

**8.2.6** Hole worn in reclaimer or leak in reclaimer seams. Check entire reclaimer for negative-pressure leaks.

**8.2.7** When using media finer than 180-mesh, as noted in Paragraph 1.9.6, the inlet baffle of the reclaimer may need to be removed. Refer to Section 7.10.

**8.2.8** Optional, externally adjustable vortex cylinder out of adjustment. Refer to Section 5.5.

## **8.3 Reduction in blast cleaning rate**

**8.3.1** Low media level reducing media flow. Check media level and replenish or replace as needed.

**8.3.2** Media-air mixture out of adjustment. Adjust metering valve, per Section 5.3.

**8.3.3** Reduced air pressure. This may be caused by the pressure regulator set too low, a malfunctioning regulator, a dirty filter element in the air filter, partially closed air valve, leaking air line, or other air tools in use. Inspect all items.

**8.3.4** Blockage in media hose or gun. Blockage may occur because of:

- A damaged or missing reclaimer screen; inspect screen.
- Heavy media flow. Adjust media flow, per Section 5.3.

**8.3.5** Worn gun parts such as nozzle or air jet. Inspect and replace all worn parts.

**8.3.6** Worn media hose. Check hose for leaks and soft spots. Replace worn or damaged hose.

**8.3.7** Air jet out of adjustment. Check adjustment, per Section 5.2.

**8.3.8** Moist media. Frequent bridging or blockage in the area of the metering valve can be caused by moisture. Refer to Section 8.5.

## **8.4 Plugged nozzle**

**8.4.1** A damaged or missing reclaimer screen will allow large particles to pass and block the nozzle. Replace or reinstall as necessary.

**8.4.2** Media mixture too rich. Adjust media-air mixture, per Section 5.3.

## **8.5 Media bridging**

**8.5.1** Frequent bridging or blockage in the media metering valve can be caused by damp media. Media becomes damp from blasting parts that are slightly oily, from moisture in the compressed-air line, or from absorption from ambient air.

**8.5.2** To avoid contaminating media from the workpiece, all parts put into the cabinet should be clean and dry. If parts are oily or greasy, degrease and dry them prior to blasting.

**8.5.3** Moist compressed air may be due to a faulty compressor that overheats, or that pumps oil or moisture into the air line, too long of an air line permitting moisture to condense on the inside, or from high humidity. Drain the air filter and receiver tank regularly. Ongoing problems with moist air may require the installation of an air dryer or aftercooler in the air-supply line.

**8.5.4** Absorption. Some media types tend to absorb moisture from the air, especially fine-mesh media in areas of high humidity. Empty the media and store it in an airtight container when cabinet is not in use.

**8.5.5** A vibrator attached to the reclaimer hopper or media metering valve may help to prevent bridging of fine-mesh media. **NOTE: To avoid the possibility of compressing media, a vibrator should be set up to start only when the foot pedal is pressed and stop when the pedal is released.**

## **8.6 Media surge**

**8.6.1** Heavy media flow. Adjust media /air mixture, per Section 5.3.

## **8.7 Blockage in media hose**

**8.7.1** Media obstructions. Usually caused when the media mixture is too rich. Adjust media-air mixture, per Section 5.3.

**8.7.2** Wet or damp media. Refer to Section 8.5.

## **8.8 Poor suction in media hose**

**8.8.1** Inadequate air supply. Refer to Sections 1.10 and 2.3.2, and make sure cfm and air hose requirements are met.

**8.8.2** Air jet needs adjustment. Check adjustment, per Section 5.2.

**8.8.3** Nozzle is worn. Replace if orifice diameter is worn 1/16" or more from original size.

**8.8.4** Blockage in media hose or nozzle. Refer to Sections 8.4 and 8.7.

**8.8.5** Air jet and nozzle combination may be wrong. Refer to the table in Paragraph 1.10.1.

**8.8.6** Air jet sleeve extends past end of air jet. Cut the sleeve to align with the air jet.

**8.8.7** Blast pressure too high. Adjust pressure, per Section 5.1.

**8.8.8** Nozzle inserted backward. The wider, tapered end of the nozzle should face toward the air jet.

## **8.9 Air only (no media) from nozzle**

**8.9.1** Low media level in reclaimer. Check media level and replenish as needed.

**8.9.2** Make sure the air hose and media hose are not reversed; the green air hose attaches to the back of the gun and the clear media hose attaches to the bottom of the gun's grip. Refer to Figure 34.

## **8.10 Blowback through media hose**

**8.10.1** Blockage in nozzle. Remove the nozzle and check for blockage.

**8.10.2** Air jet may be too large for nozzle. Refer to the table in Paragraph 1.10.1.

**8.10.3** Blast pressure too high. Adjust blast pressure, per Section 5.1.

## **8.11 Blasting does not begin when the foot pedal is pressed**

**8.11.1** Door interlocks not engaging. Check adjustment, per Section 5.7.

**8.11.2** Blocked or leaking control lines. Check all urethane tubing for blockage or leaks.

**8.11.3** Foot pedal valve malfunction. Check foot pedal alignment, and inlet and outlet lines for pressure.

**8.11.4** Make sure lines are not reversed on the foot pedal or pilot regulator. Refer to the cabinet controls and plumbing schematic in Figure 40.

---

**8.11.5** Pressure regulator may be set too low or OFF. Adjust blast pressure, per Section 5.1.

**8.11.6** Make sure that the air compressor is operating and air-supply valves are open.

**8.11.7** Check the nozzle to see if it is plugged. Refer to Section 8.4.

## **8.12 Blasting continues after the foot pedal is released**

**8.12.1** Make sure the 3-way valve in the foot pedal exhausts air when the pedal is released. If it does not exhaust, check the inbound air line for blockage; if no blockage, replace the valve.

## **8.13 Media buildup in cabinet hopper; media does not convey to reclaimer**

**NOTE: Do not pour media directly into the cabinet hopper, as overfilling may occur.** Overfilling will result in media carry over to the dust collector and possible blockage in the conveying hose.

**8.13.1** Exhauster motor rotating backward. The motor should rotate as indicated by the arrow on the exhauster housing. If it does not rotate in the proper direction, **lockout** and **tagout** electrical power and switch the motor leads, as shown on the motor plate. Refer to the system's wiring schematic. Refer to Sections 2.5.1 and 2.5.2.

**8.13.2** Dust-collector damper closed too far, restricting air movement through cabinet. Adjust static pressure, per Section 5.4.

**8.13.3** Dust-collector filter cartridge(s) clogged. Refer to the dust-collector owner's manual noted in Section 1.1.1.

**8.13.4** Hole worn in flex hose between cabinet hopper and reclaimer inlet or between the reclaimer outlet and dust collector inlet. Inspect hoses and replace them as needed and route them with as few bends as possible to prevent early wear.

**8.13.5** Reclaimer door open. DO NOT operate unless door is closed.

**8.13.6** Obstruction flex hose. Remove hoses and check for blockage.

## **8.14 Static shocks**

**8.14.1** Cabinet and/or operator not grounded. Abrasive blasting generates static electricity. The cabinet must be earth-grounded to prevent static buildup. Refer to Sections 2.2.1 and 2.4. If shocks persist, the operator may be building up static. Attach a small ground wire, such as a wrist strap, from the operator to the cabinet.

**8.14.2** Gloves wearing thin. Inspect gloves and replace them as needed.

**8.14.3** Avoid holding parts and blasting off the grate. Static will buildup in the part if not dissipated through the metal cabinet. If blasting parts off the grate cannot be avoided, attach a ground wire between the cabinet and the part.

## **8.15 Dust leaking from cabinet**

**8.15.1** Damaged door gaskets. Inspect and replace damaged gaskets.

**8.15.2** Refer to Section 8.13.

## **8.16 Dust leaking from dust collector**

**8.16.1** Damaged or loose filter cartridge(s). Inspect filters, replace as needed.

**8.16.2** Cartridge(s) not seasoned; refer to the dust-collector owner's manual.

**8.16.3** Refer to the dust-collector owner's manual

---

9.0 ACCESSORIES AND REPLACEMENT PARTS

9.1 Optional Accessories

Turntables and Turntables with Tracks

**⚠ WARNING**

Turntable capacities are based on concentric loading. Use solid fixturing to hold heavy parts in place. Do not remove lift equipment until the part is adequately supported to prevent movement. Moving or rotating heavy, unsupported or off-centered parts may cause them to shift or topple, and cause severe injury.

Fixed-Base Turntable Without Bearing

Description	Stock No.
20" dia. 25 lb. capacity .....	12412

Fixed-Base Turntable with Bearing, 500 lb. Capacity  
Figure 29

Item	Description	Stock No.
(-)	20" dia. assembly, 500 lb. capacity .....	12411
1.	Turntable 20" diameter 500 lb. capacity .....	18329
2.	Bearing, 1-1/2" bore .....	11517
3.	Protector, bearing .....	13479
4.	Screw, 1/2-NC x 1-1/2" cap .....	03454
5.	Washer, 1/2" lock .....	03516
6.	Nut, 1/2-NC hex .....	03511

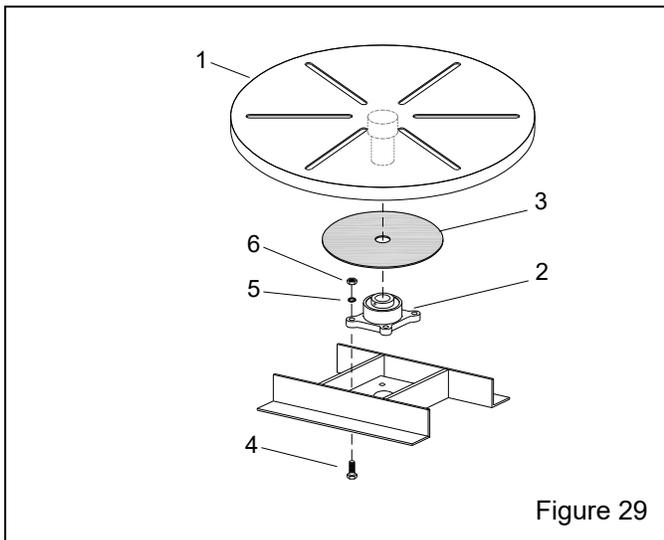


Figure 29

Low Profile Table and Track Assembly, 500 lb. capacity – Figure 30

Item	Description	Stock No.
(-)	Track and Table assembly, as shown in Section 3.5 .....	24841
1.	Roller .....	25023
2.	Washer, 5/8 flat .....	03715
3.	Nut, 5/8 NF jam .....	03712

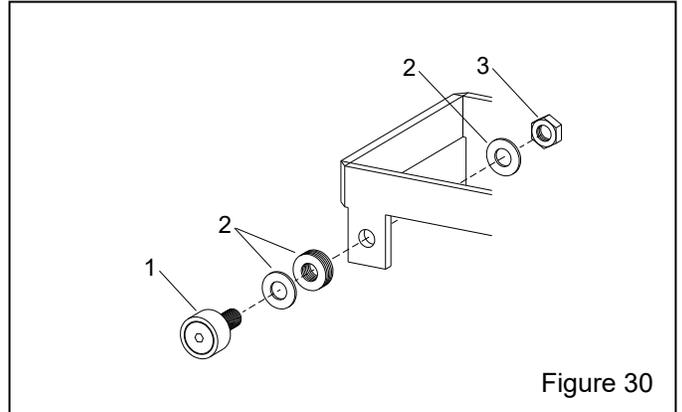


Figure 30

Aluminum oxide kit, field installed, includes: light-lined flex hose, #5 boron carbide nozzle, black-rubber cabinet curtains with grommets and curtain hardware. Does not include rubber reclaimer liners.

for BNP-55 w/ 300 reclaimer .....	12953
for BNP-55 w/ 600 reclaimer .....	14129

Aluminum oxide kit, factory installed, includes: #5 boron carbide nozzle, black-rubber cabinet curtains with grommets and curtain hardware. Does not include rubber reclaimer liners.

for BNP-55 w/ 300 and 600 cfm reclaimers .....	12954
--	-------

Rubber cabinet curtains, BNP-55, black	
Curtain set, w/ mounting hardware .....	23530
Back curtain .....	14318
Front curtain .....	14319
Door curtain, 2 required .....	14320

Rubber cabinet curtains, BNP-55, white	
curtain set .....	23540

Time delay door locks .....	24163
Lock pins (pkg of 25) for twist-on hose couplings ....	11203
Safety cable, for 1/2" to 1-1/4" OD hose .....	15012
Adjusting tool, BNP air jet .....	19041
Manometer kit .....	12528
Tumble basket, 2-gallon .....	12227
Anti-fatigue floor-mat, 2 ft x 3 ft for front of cab. ....	24744
Armrest assembly .....	24900
Armrest assembly, replacement .....	24899
Noise-reduction arm port covers, pair .....	29455

**Reclaimer Liners, 600 cfm only – Figure 31**  
 For modular-style reclaimers sold on or after 09/2018.

Item	Description	Stock No.
(-)	Rubber liner sets, 600 cfm .....	29541
1.	Top liner .....	29535
2.	Baffle, lined.....	29531
3.	Inner cylinder .....	29530
4.	Wall liner, reclaimer body .....	29533
5.	Inlet-side liner.....	29532
6.	Cone liner, .....	29707
7.	Inlet-top liner .....	29536
8.	Screw, 10-16 x 3/4" self-drill/tap .....	12722

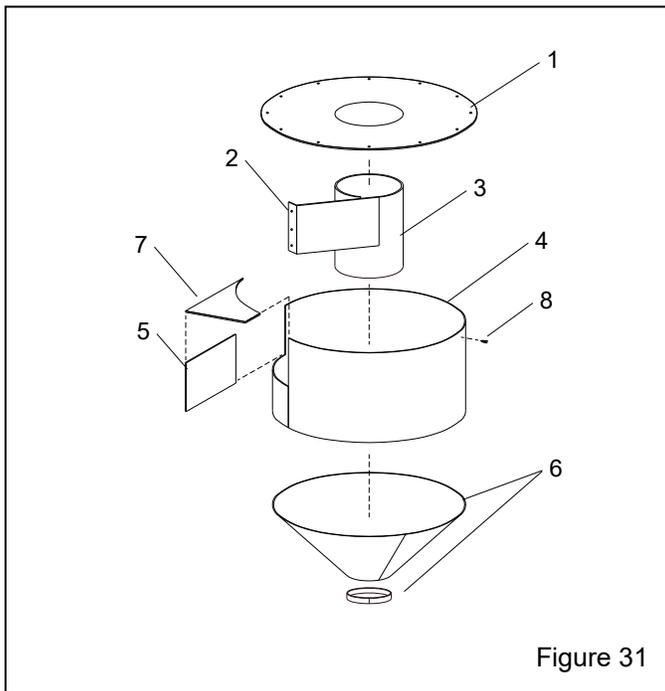


Figure 31

**Extension Nozzles – Figure 32**

Item	Description	Stock No.
1.	3" Straight extension nozzle No. 5, 5/16" orifice .....	11921
	No. 6, 3/8" orifice .....	11922
	No. 7, 7/16" orifice .....	11923
2.	6" Straight extension nozzle No. 5, 5/16" orifice .....	11927
	No. 6, 3/8" orifice .....	11928
	No. 7, 7/16" orifice .....	11929
3.	9" Straight extension nozzle No. 5, 5/16" orifice .....	11924
	No. 6, 3/8" orifice .....	11925
	No. 7, 7/16" orifice .....	11926
4.	Side-angle extension nozzle assemblies with No. 5 orifice, includes 5, 6, 7, and 8	
	4" long assembly .....	21311
	6" long assembly .....	12374
	9" long assembly .....	12373
5.	Casing, side-angle extension nozzle	
	4" long casing .....	11943
	6" long casing .....	11940
	9" long casing .....	11939
6.	Tip, side-angle extension .....	12173
7.	Snap ring, side-angle extension .....	12040
8.	O-ring, side-angle extension .....	08977

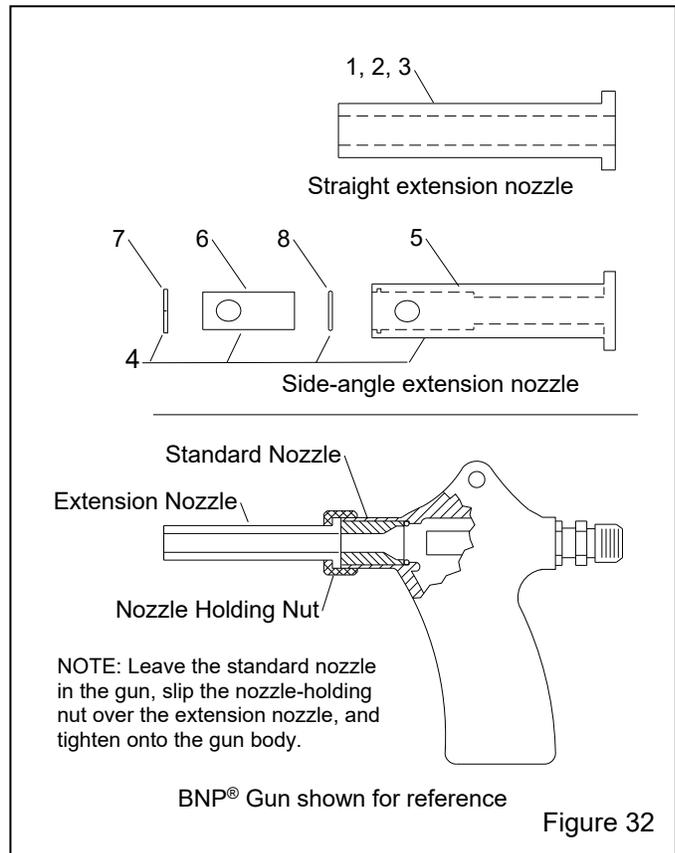


Figure 32

9.2 Cabinet Replacement Parts – Figure 33

Item	Description	Stock No.
1.	Gasket, 5/16" x 1", adhesive-backed, per foot, specify feet required	
	Door, 8 ft per door .....	00187
	Light assembly, 7 ft required .....	00187
	Air-inlet damper, 3 ft required .....	00187
2.	Gasket, 5/32" x 3/4", 3 ft required .....	00192
3.	Door assembly, left .....	20068
4.	Door assembly, right .....	20069
5.	Grate for 55 .....	11813
6.	Latch kit, door .....	20064
7.	Glove set formative	
	Band-clamp attachment .....	11215
	Quick-Change (clampless attachment) ...	28820
8.	Glove, left hand only	
	Band-clamp attachment .....	12710
	Quick-Change (clampless attachment) ...	28638
9.	Glove, right hand only	
	Band-clamp attachment .....	12711
	Quick-Change (clampless attachment) ...	28639
10.	Clamp, glove .....	11576
11.	Filter-regulator inlet piping assembly	
	Refer to Figure 35 for parts .....	12763
12.	Clamp, flex hose	
	for 4" hose .....	11577
	for 5" hose .....	11578
13.	Grommet, 3/4" ID for media and air hose ..	11798
14.	Adaptor pipe universal, flex hose	
	4" for 300 cfm .....	23295
	5" for 600 cfm .....	23296
15.	Gasket, flex hose adaptor pipe	
	4" for 300 cfm .....	23258
	5" for 600 cfm .....	23259
16.	Bracket, door interlock actuator .....	19152
17.	Over-travel stop, door interlock .....	20004
18.	Detent sleeve, door interlock .....	15042
19.	Air valve, 3 way, door interlock .....	12202
20.	Regulator, 1/8" NPT pilot .....	12715
21.	Gauge, 1/8" cbm pressure .....	01908
22.	Fitting, 1/8" NPT elbow x 1/8" barb .....	11733
23.	Foot pedal assembly,	
	less tubing .....	20483
	with tubing, 14 feet .....	20195
24.	Cord with plug, 120 volt .....	11669
25.	Damper, air-inlet .....	23156
26.	Hose, light-lined flex, specify feet required	
	4" ID for 300 cfm, 7 ft required .....	12466
	5" ID for 600 cfm, 7 ft required .....	12467

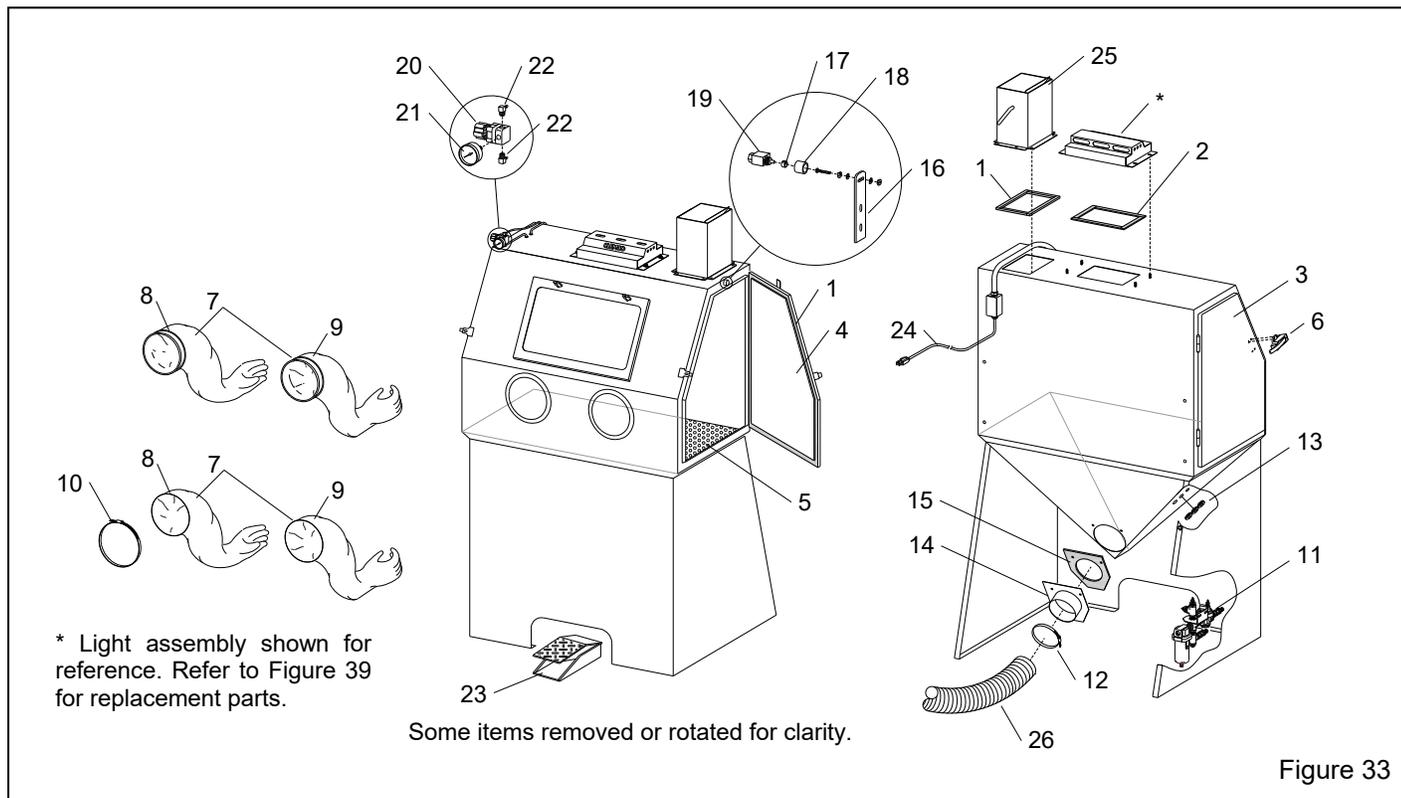


Figure 33

9.3 BNP® Gun and Hose Assembly – Figure 34

Item	Description	Stock No.
(-)	BNP Gun assemblies less nozzle, includes items 1 (brass) through 7	
	No. 4 Gun .....	12301
	No. 5 Gun .....	12302
	No. 6 Gun .....	12303
	No. 7 Gun .....	12304
	No. 8 Gun .....	12305
1.	Nut, nozzle holding	
	Standard, knurled brass .....	11914
	Urethane covered .....	11574
2.	O-ring .....	08975
3.	Gun body .....	11802
4.	Lock nut, air jet .....	11913
5.	Rubber sleeve .....	12097
6.	Air jet assembly, includes item 5	
	No. 4 .....	12342
	No. 5 .....	12343
	No. 6 .....	12344
	No. 7 .....	12345
	No. 8 .....	12346
7.	Fitting, hose, 3/8" NPT x 1/2" barb .....	06369
8.	Hose end, 1/2" barb x 1/2" fem. swivel ....	15002

9.	Nozzle, ceramic	
	No. 5, green tip .....	11930
	No. 6, blue tip .....	11931
	No. 7, red tip .....	11932
	Nozzle, tungsten carbide	
	No. 5 .....	13118
	No. 7 .....	12882
	No. 8 .....	11942
	Nozzle, boron carbide	
	No. 5 .....	11935
	No. 6 .....	11936
	No. 7 .....	11937
	No. 8 .....	12894
10.	Hose, 1/2" air, specify ft required .....	12472
11.	Hose, media, clear, 10 ft is standard	
	Length, specify ft required .....	12476
12.	Wide-spray nozzle	
	Tungsten carbide, No. 6 .....	11947
	Boron carbide	
	No. 6 .....	11934
	No. 8 .....	11944
13.	Wide-spray nozzle nut	
	Knurled brass .....	11916
	Urethane covered .....	12906
14.	Wide-spray retaining ring .....	12038
15.	Wide-spray nozzle guard .....	12295
16.	Adjusting tool, correctly positions air jet ....	19041

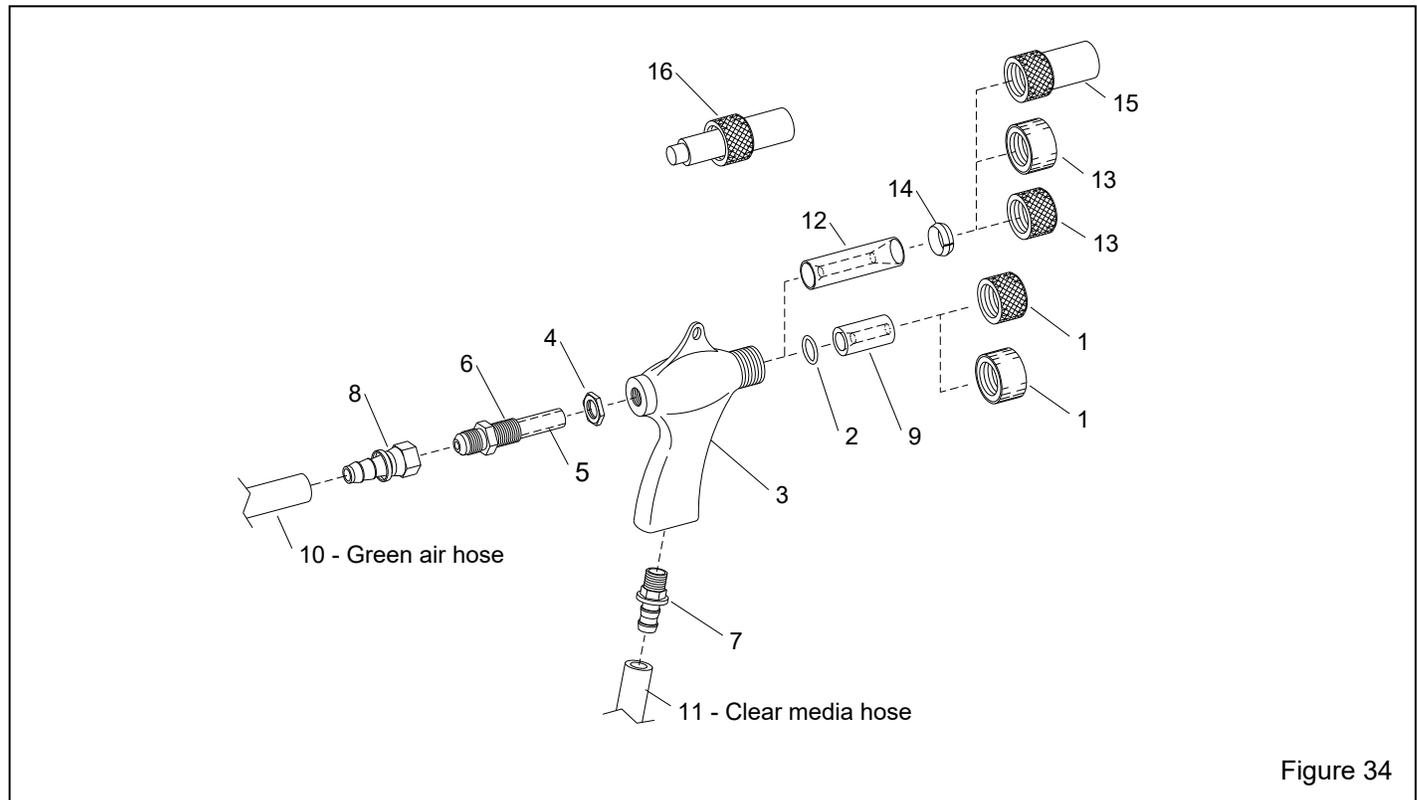


Figure 34

9.4 Inlet-Air Regulator Assembly – Figure 35

Item	Description	Stock No.
(-)	BNP Suction Regulator Assembly Includes all items shown .....	12763
1.	Filter, 1/2" manual drain air .....	01308
2.	Regulator, 1/2" pilot operated pressure .....	11345
3.	Bracket, 1/2" regulator assembly .....	19231
4.	Nipple, 1/2" x 2 .....	01734
5.	Cross, 1/2" NPT .....	10254
6.	Lock nut, 1/2" .....	12713
7.	Bushing, 1/2" NPT x 1/8" .....	11350
8.	Adaptor, 1/2" NPT x 1/2" flare .....	11351
9.	Fitting, straight, 1/8" NPT x 1/8" barb .....	11732
10.	Bushing, 1/4" NPT x 1/8" brass .....	02010
11.	Hose end, 1/2" barb x 1/2" female swivel ...	15002
12.	Tee, 1/2" NPT .....	01787
13.	Nipple, 1/2" x close .....	01733
14.	Plug 1/2" NPT .....	01759
15.	Nipple, 1/2" x 3 .....	01735
16.	Screw, 1/2-NC x 1/2 set .....	03471

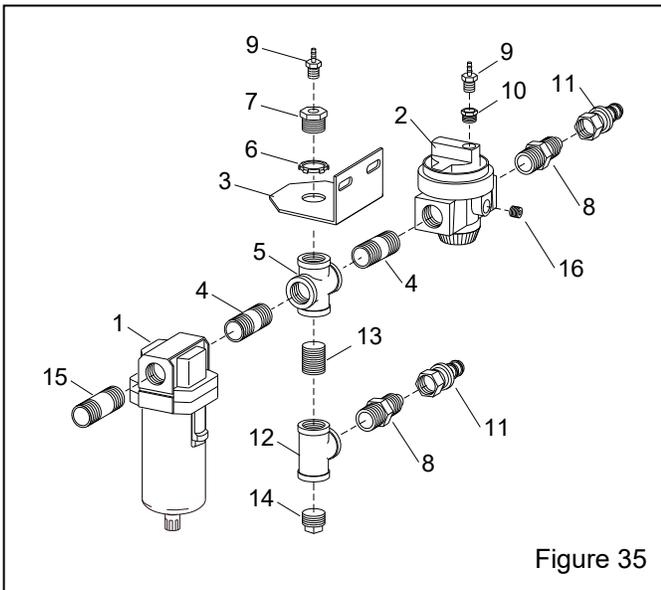


Figure 35

9.5 View-Window Assembly – Figure 36

Item	Description	Stock No.
1.	Window glass, 12.5" x 19.5" laminated ....	12212
2.	Gasket, 5/16" x 3/4", applied to cabinet per foot, 6-feet required .....	00189
3.	Gasket, 5/32" x 3/4", applied to window Frame, per foot, 6 ft required .....	00192
4.	Cover lens, pkg. of 5 .....	06190
5.	Nut, plastic, window frame .....	23035
6.	Window frame, quick change .....	22826

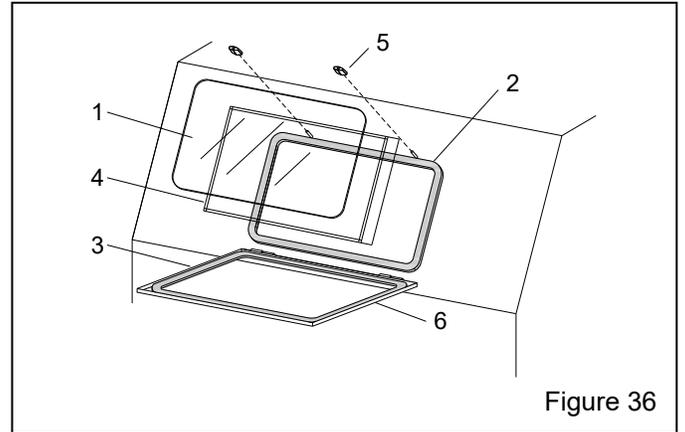


Figure 36

9.6 Metering Valve, BNP – Figure 37

Item	Description	Stock No.
(-)	Metering valve assembly, BNP .....	12417
1.	Metering stem assembly (items 2, 3, & 4) ..	23889
2.	Stem, metering adjusting .....	23097
3.	Screw, adjusting .....	23098
4.	Nut, adjusting stem lock .....	23099
5.	Body, metering valve .....	11532
6.	Fitting, hose, 3/8" NPT x 1/2" barb .....	06369
7.	Plug, metering valve .....	12011

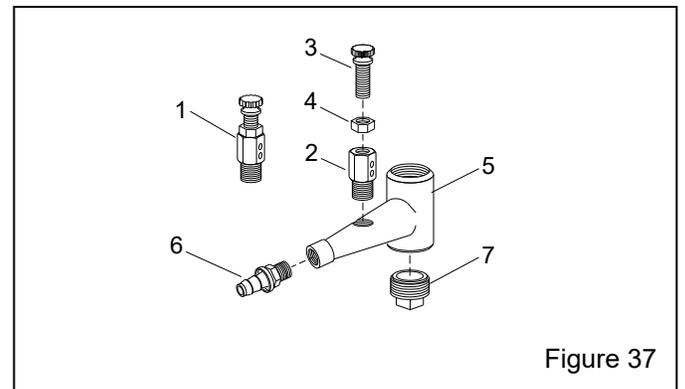


Figure 37

9.7 Foot Pedal Assembly – Figure 38

Item	Description	Stock No.
(-)	Foot pedal assembly, less tubing, includes items 1 thru 9	20483
	with tubing, 14 feet Item 10	20195
1.	Foot pedal casting set, top and base	28379
2.	Valve, 10-32, 3 way n/c	20026
3.	Drive pin, grooved	20109
4.	Screw, sh 1/4 NF x 3/4"	03086
5.	Screw, 10-32 x 1/2" fh	19571
6.	Adaptor, 10-32 thread x 1/8 barb	11731
7.	Spring, 1-1/4" x 3-1/2"	20121
8.	Screw, 8-32 x 3/8" thread cutting	11389
9.	Bumper, rubber (feet)	21522
10.	Tubing, 1/8" ID twin, per foot, 14 ft standard length, specify ft req'd	19577
11.	Tie, nylon wire	12139

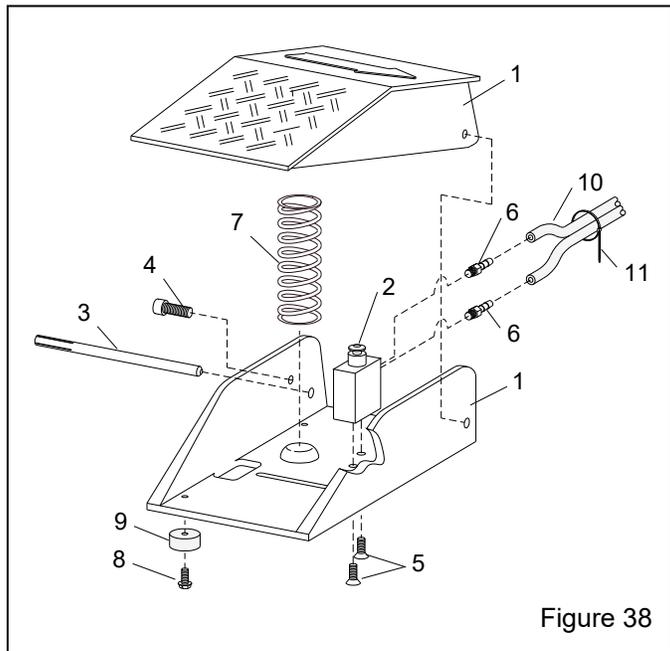


Figure 38

9.8 LED Light Assembly – Figure 39

Item	Description	Stock No.
1.	Cover, LED light mount	29712
2.	LED light module, 50w	29711
3.	Diffuser lens	29713
4.	Gasket, 5/16" x 1", 3 ft required	00190
5.	Strain relief connector	11631
6.	Nut, 1/2" conduit	12713
7.	Nut, 1/4-20 hex	03111
8.	Washer, 1/4 lock	03117
9.	Washer, 1/4 flat	03116

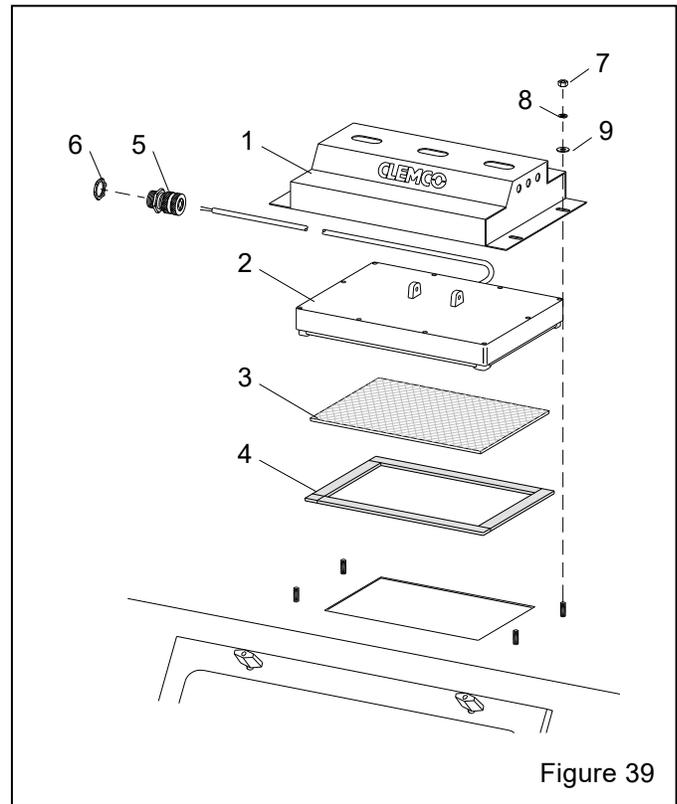


Figure 39

9.9 Cabinet Controls and Plumbing – Figure 40

Item	Description	Stock No.
1.	Valve, 3 way .....	12202
2.	Fitting, straight, 1/8" NPT x 1/8" barb .....	11732
3.	Tubing, 1/8" urethane, per foot, specify ft required .....	12475
4.	Tubing, twin urethane, per foot, specify ft required .....	19577
5.	Foot pedal assembly, less tubing .....	20483
	with tubing, 14 feet item 4 .....	20195
6.	Fitting, 1/8" NPT elbow x 1/8" barb .....	11733
7.	Bushing 1/2" x 1/8" NPT .....	11350
8.	Bushing 1/4" x 1/8" NPT .....	02010

9.	Bracket, mounting .....	19231
10.	Filter, 1/2" air .....	01308
11.	Adaptor, 1/2" NPT x 1/2" flare .....	11351
12.	Hose end, 1/2" barb x 1/2" female swivel ..	15002
13.	Hose end, 1/2" barb x 3/8" male NPT .....	06369
14.	Blow-off nozzle .....	13116
15.	Air hose, 1/2", specify ft required .....	12472
16.	Gun assembly, BNP No. 5 .....	12302
17.	Hose, clear urethane, 10 ft is standard Length, specify ft required .....	12476
18.	Regulator, 1/2" pilot operated .....	11345
19.	Regulator, 1/8" pilot .....	12715
20.	Gauge, 1/8" cbm pressure .....	01908
21.	Metering valve assembly, BNP .....	12417

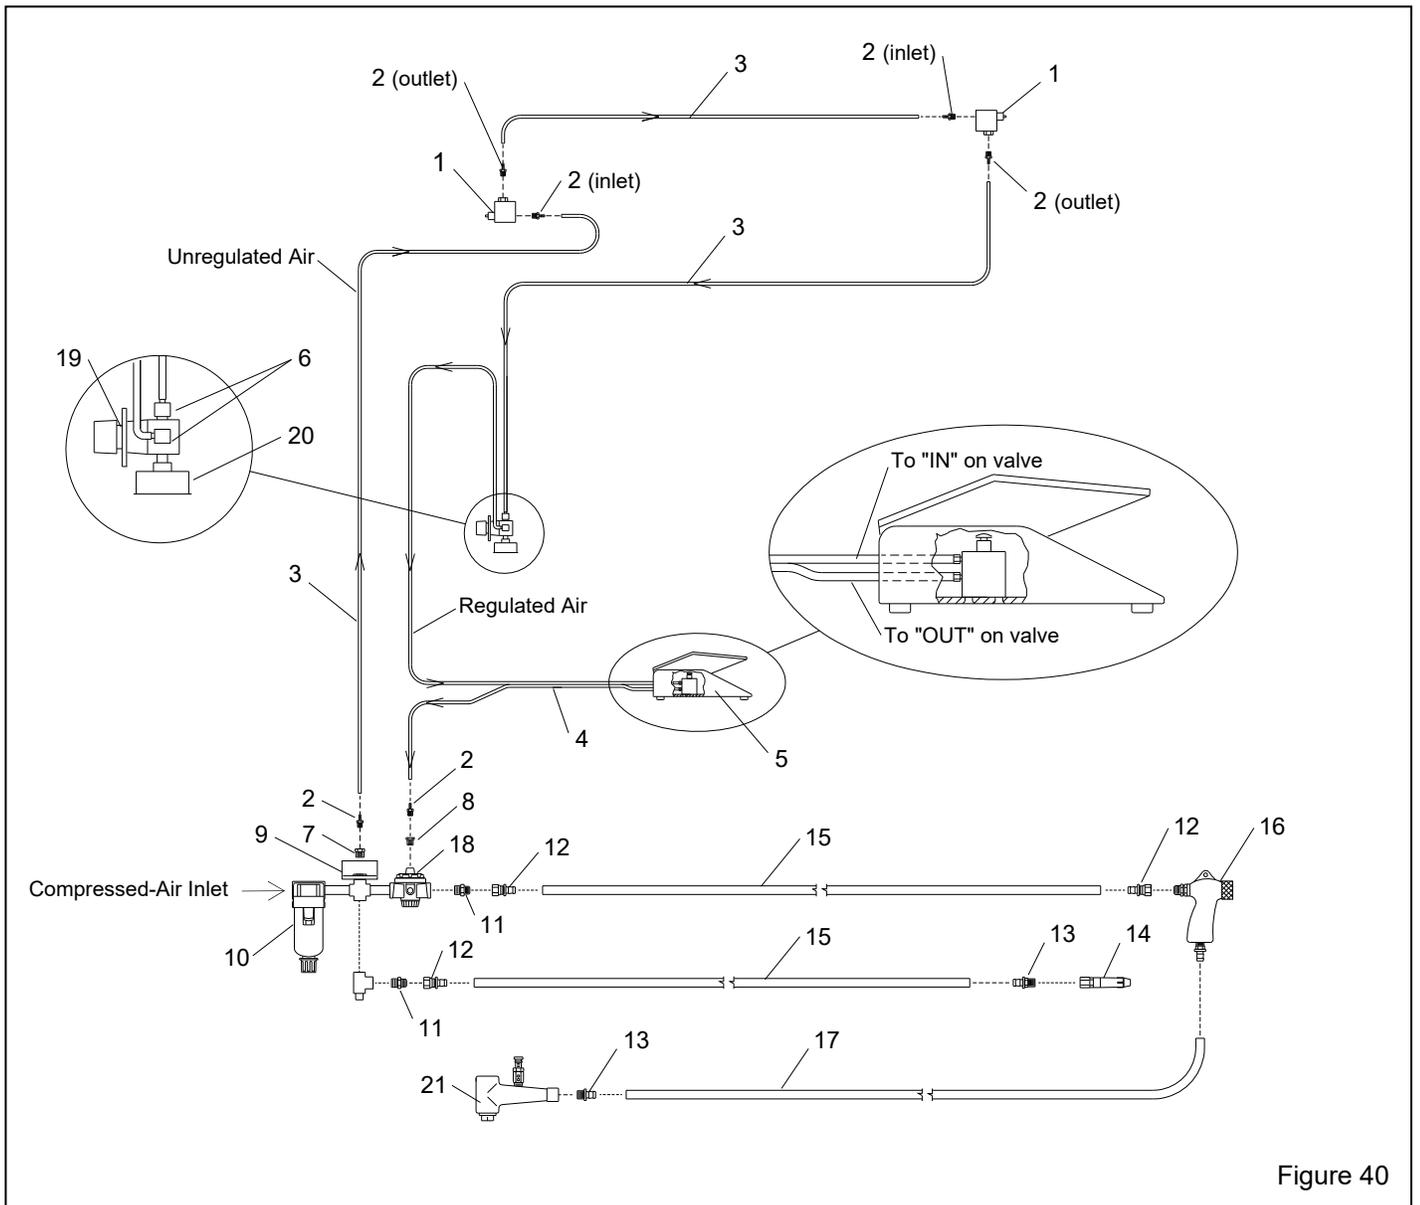


Figure 40

9.10 Replacement Reclaimer Assemblies

Replacement reclaimers are pull-thru type for use with reverse-pulse dust collectors; they include the hose inlet, screen, and wear plate. They do not include metering valve flex hoses, hose clamps, or mounting brackets. Order separately when needed.

Description	Stock No.
300 cfm reclaimer with 5" outlet plate .....	28965
600 cfm reclaimer with 6" outlet plate .....	29506
600 cfm reclaimer w/external adjustable vortex.....	29500

The externally adjustable vortex cylinder is an option when cabinets are provided with CDC-1 Dust Collector; it is standard when cabinets are provided with an RPC-2.

9.11 300 CFM Reclaimer Replacement Parts  
Figure 41

Refer to Figure 42 for 600 cfm reclaimer replacement parts.

Item	Description	Stock No.
(-)	300 cfm reclaimer with 5" outlet plate .....	28965
1.	Gasket, 5/16" x 1" adhesive-backed, per foot, 3 ft required .....	00187
2.	Screen assembly, 8-mesh .....	21265
3.	Gasket, reclaimer door .....	11745
4.	Inlet pipe adaptor, 4"- 300 cfm .....	12365
5.	Gasket, inlet adaptor, 4" - 300 cfm .....	11746
6.	Wear plate, rubber-lined with mounting screws .....	14060
7.	Outlet plate with 5" pipe - 300 cfm .....	18475
8.	Latch assembly, door .....	12263
9.	Door assembly, w/gasket and latch .....	14271
*10.	Clamp, hose, 4-1/2", for 4" ID hose .....	11577
*11.	Hose, 4" ID light-lined flex, per foot, 7 feet required .....	12466
*12.	Hose, 5" ID unlined flex, per foot, specify length required .....	12449
*13.	Clamp, hose, 5-1/2", for 5" ID hose .....	11578
*14.	Bracket, reclaimer mount, each for BNP-55 .....	12847
*15.	Metering valve assembly, BNP .....	12417

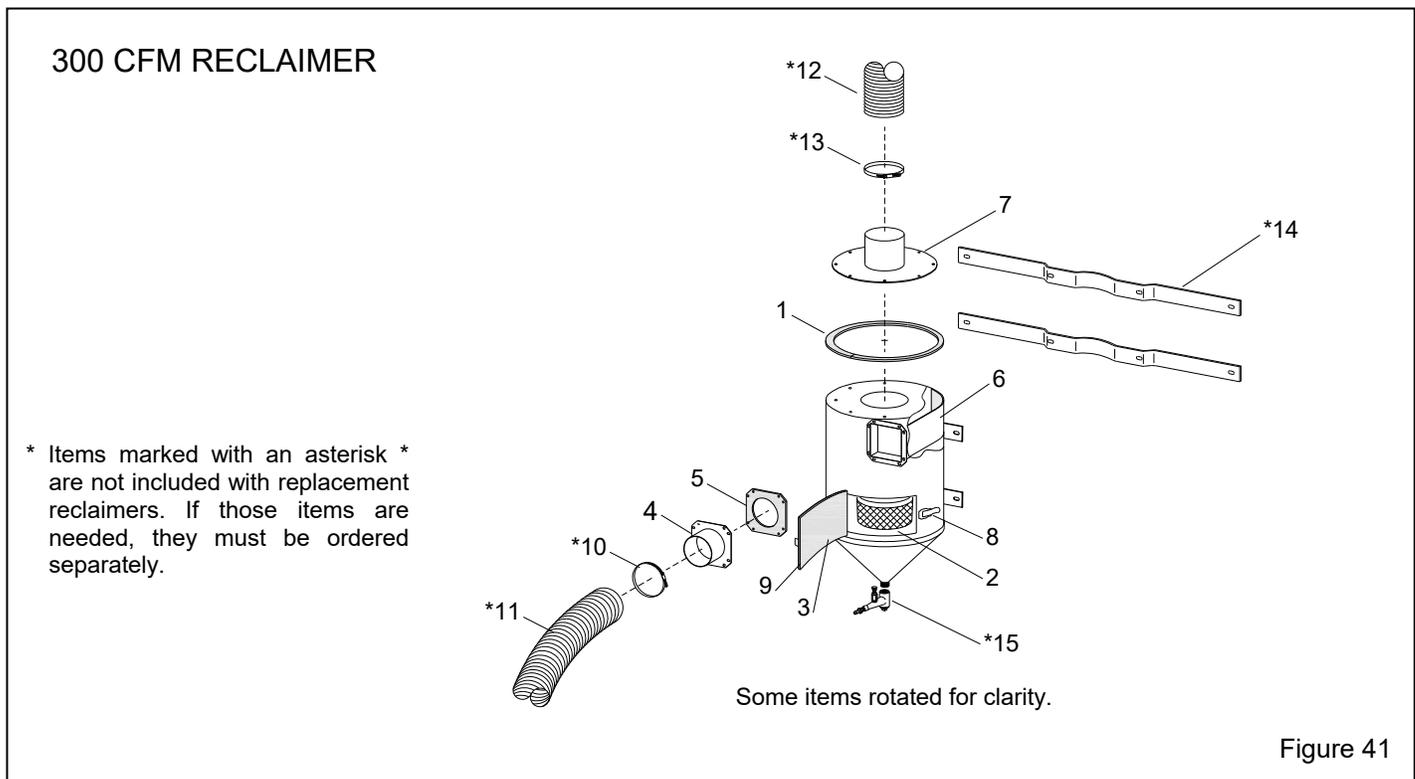


Figure 41


**9.12 600 CFM Modular Reclaimer Replacement Parts – Figure 42**

Refer to Figure 41 for 300 cfm reclaimer replacement parts.

Item	Description	Stock No.
(-)	600 cfm reclaimer with 6" outlet plate .....	29506
(-)	600 cfm reclaimer w/external adj. vortex.....	29500
1.	Gasket, 1/8" x 2" adhesive backed, per foot 6 feet required at each location .....	13089
2.	Screen assembly, 8-mesh .....	21265
3.	Gasket, reclaimer door .....	11745
4.	Inlet-pipe adaptor, 5" - 600 cfm .....	12361
5.	Gasket, inlet adaptor current modular and all unlined models ..	11779
	600 rubber-lined recl prior to 09/2018 ...	29631
6.	Wear plate, rubber-lined w/mounting screws .....	29542
7.	Top plate, 600 cfm modular w/6" pipe .....	29538
8.	Latch assembly, door .....	12263
9.	Door assembly, w/gasket and latch .....	14271
10.	Hopper, 600 cfm modular suction .....	21650
11.	Eyebolt 3/8-NC .....	00430

12.	U-channel, 3/8, 1-foot required .....	04076
13.	Baffle, 600 modular .....	29524
14.	Body section, modular, with door, wear plate, and baffle .....	29486
15.	Body section, modular, with door, rubber liners, and Item 26 top plate .....	29495
16.	Gasket, 1/8" x 2" adhesive-backed, per foot, 1 foot required at this location .....	13089
17.	Bracket, modular reclaimer mount, each ....	29529
*18.	Bracket, reclaimer mount, each for BNP-65 .....	12766
	for BNP-220 .....	12782
*19.	Metering valve assembly, BNP .....	12417
*20.	Hose, 5" ID light-lined flex, per foot, 9 feet required .....	12467
*21.	Clamp, 5-1/2", for 5" ID hose .....	11578
*22.	Hose, 6" ID unlined flex, per foot, specify length required .....	12452
*23.	Clamp, hose, 6-1/2", for 6" ID hose .....	00750
**24.	Gasket, 5/16" x 1" adhesive-backed, per foot, 4 ft. required.....	00187
**25.	Vortex cylinder, pull thru 600 modular .....	29510
**26.	Top plate, modular w/exhaust /flange .....	29487

**600 CFM MODULAR RECLAIMER**

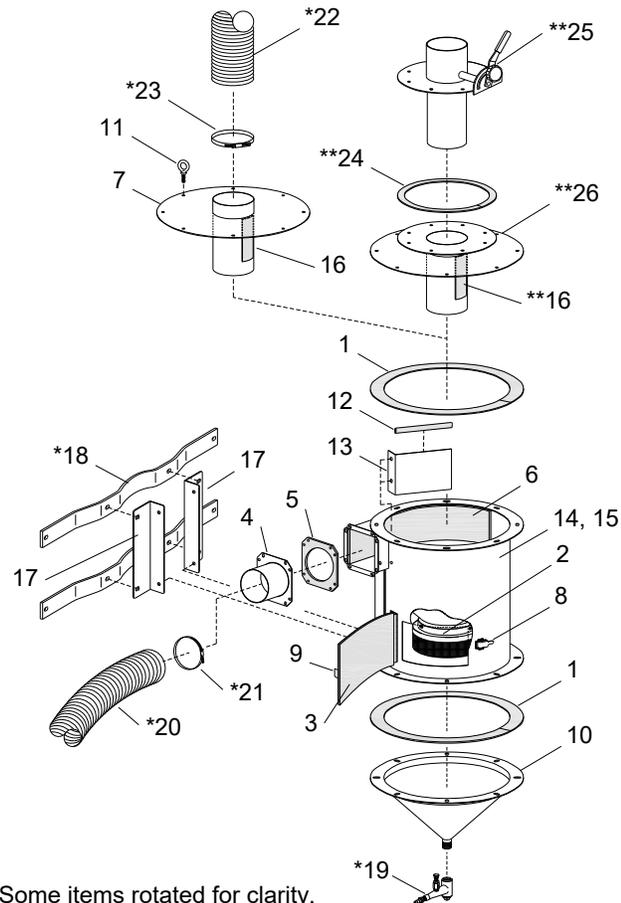

\* Items marked with an asterisk \* are not included with replacement reclaimers. If those items are needed, they must be ordered separately.

\*\* The vortex cylinder is optional with cabinets provided with a CDC-1 Dust Collector, but standard on cabinets provided with an RPC-2 Dust Collector.

Some items rotated for clarity.

Figure 42